

This is a digital copy of a book that was preserved for generations on library shelves before it was carefully scanned by Google as part of a project to make the world's books discoverable online.

It has survived long enough for the copyright to expire and the book to enter the public domain. A public domain book is one that was never subject to copyright or whose legal copyright term has expired. Whether a book is in the public domain may vary country to country. Public domain books are our gateways to the past, representing a wealth of history, culture and knowledge that's often difficult to discover.

Marks, notations and other marginalia present in the original volume will appear in this file - a reminder of this book's long journey from the publisher to a library and finally to you.

Usage guidelines

Google is proud to partner with libraries to digitize public domain materials and make them widely accessible. Public domain books belong to the public and we are merely their custodians. Nevertheless, this work is expensive, so in order to keep providing this resource, we have taken steps to prevent abuse by commercial parties, including placing technical restrictions on automated querying.

We also ask that you:

- + *Make non-commercial use of the files* We designed Google Book Search for use by individuals, and we request that you use these files for personal, non-commercial purposes.
- + Refrain from automated querying Do not send automated queries of any sort to Google's system: If you are conducting research on machine translation, optical character recognition or other areas where access to a large amount of text is helpful, please contact us. We encourage the use of public domain materials for these purposes and may be able to help.
- + *Maintain attribution* The Google "watermark" you see on each file is essential for informing people about this project and helping them find additional materials through Google Book Search. Please do not remove it.
- + *Keep it legal* Whatever your use, remember that you are responsible for ensuring that what you are doing is legal. Do not assume that just because we believe a book is in the public domain for users in the United States, that the work is also in the public domain for users in other countries. Whether a book is still in copyright varies from country to country, and we can't offer guidance on whether any specific use of any specific book is allowed. Please do not assume that a book's appearance in Google Book Search means it can be used in any manner anywhere in the world. Copyright infringement liability can be quite severe.

About Google Book Search

Google's mission is to organize the world's information and to make it universally accessible and useful. Google Book Search helps readers discover the world's books while helping authors and publishers reach new audiences. You can search through the full text of this book on the web at http://books.google.com/

EARTH SLOPES, RETAINING WALLS AND DAMS

CHARLES PRELINI

Eng 6/7.08

Parbard Anibersity



LIBRARY OF THE

DIVISION OF

ENGINEERING

Gift of the publishers.

TRANSFERRED

TO

HARVARD COLLEGE

LIBRARY



The D. Van Nostrand Company intend this book to be sold to the Public at the advertised price, and supply it to the Trade on terms which will not allow of reduction.

GRAPHICAL DETERMINATION OF EARTH SLOPES, RETAINING WALLS AND DAMS

GRAPHICAL DETERMINATION

OF

EARTH SLOPES, RETAINING WALLS AND DAMS

\mathbf{BY}

CHARLES PRELINI, C.E.

PROFESSOR OF CIVIL ENGINEERING, MANHATTAN COLLEGE, NEW YORK CITY

Author of "Earth and Rock Excavation," "Tunneling," etc.



NEW YORK

D. VAN NOSTRAND COMPANY

23 MURRAY AND

1908

27 WARREN STS

Copyright, 1908

By D. Van Nostrand Company

DEC 4 1908

Engineering Library

The publisher

17.4

JUN 20 1917

TRANSFERRED TO

The Plimpton Press Norwood Mass. U.S.A.

PREFACE

A large part of this work consists of graphical methods of solving problems concerning the slopes of earth embankments, the lateral pressure of earth against a wall, and the thickness of retaining walls and dams. The graphical methods of Culmann, Rebhann, Weyrauch, Blanc, and others have been employed; the general course of the discussion is similar to that followed by Professor Senesi, of Italy. Hence, with the exception of the graphical determination of earth slopes of uniform stability, there is nothing in these pages which has not been already published and criticised. But the prominence given to the graphical over the analytical mode of treatment may be found useful to a numerous class of students.

The book is divided into five chapters. In the first chapter attention is given to the forces which determine the various slopes of the earth embankments. Young engineers will find it profitable to study with care the economies secured by designing the slopes of deep trenches for equal stability instead of using the ordinary slope of 1 to 1.

The second chapter is devoted to the graphical determination of the pressure of earth against a retaining wall, following the theory of Professor Rebhann. This chapter also contains solutions of the different problems which may be encountered in practical work.

In the third chapter is given the analytical demonstration of Professor Rebhann's theory, together with the formulas deduced from the analytical theories of Weyrauch and Rankine. In three tables a comparison is made between the results obtained by the graphical process of determining the earth pressure and those given by the analytical method. As will be seen, the results agree well, showing that for practical purposes both methods lead to almost the same result. The tables were deduced from the class work of the author's students at Manhattan College.

The fourth chapter is devoted to the design of retaining walls. Here will be found the most common types of wall used in practice, together with the manner of determining the thickness of their bases both graphically and analytically.

The fifth chapter is devoted to dams. The space devoted to a subject so popular and extensively discussed in schools and text-books may seem disproportionately small; but in the class room, dams should be taken for what they are; viz. a particular case of retaining walls in which the material to be sustained is deprived of friction.

The discussion of the reliability of the various theories is omitted in order to avoid confusion in the untrained mind of the student, who is unable to follow with profit such complicated discussions based upon slight differences in the assumptions. It is only when students have mastered the subject that they are able to discuss intelligently the various theories and to accept or discard them according to their comparative value. Such critical work should be done by the students individually and not collectively. To show young men at the very beginning of their professional studies that all theories are more or less defective would generate confusion, produce uncertainty and a want of self-confidence. It would lead to a depreciation of every theory and to undue reliance on practical formulas.

In conclusion, these pages are intended for students and not for professional engineers. Simplicity and clearness have been the main objects in view; the experience of the class room makes the author believe that this little work will be of use to students and teachers, while at the same time it may be of some help to the practical engineer.

C. PRELINI.

Manhattan College, New York, September, 1908.

CONTENTS

CHAPTER I

	THE STABILITY OF EARTH SLOPES	
BEC:	non	PAG
1.	Measurement of Slopes	
2.	Equilibrium of a Slope	
3.	Weight of Soils; Specific Weight	9
4.	Internal Friction of Soils; Natural Slope, or Slope of Repose.	
	Cohesion in Soil; The Coefficient of Cohesion	
	Graphical Determination of the Coefficient of Cohesion	
	The Parabola of Cohesion; Practical Applications. The	
	Stepped Slope. The Slope of Equal Stability	1:
8.	Analytical Calculation of Cohesion; Slope without Surcharge.	18
	Surcharged Slope	20
	Earth Slopes in Practice	25
	CHAPTER II RETAINING WALLS: GRAPHICAL METHODS	
11.	Theories of Earth Pressure. Theory of the Sliding Prism, or Coulomb's Theory. Analytical Theory, or Rankine's Theory	28
12.	Graphical Method after Rebhann	30
13.	Values of ϕ and ϕ'	38
	Location of Plane of Rupture	38
	The Triangle of Pressure	37
	Application of the Method to Various Practical Cases	38
	Surcharged Embankment; Any Angle of Surcharge	39
18.		44
	Embankment with Maximum Surcharge; Angle of Surcharge	77
10.	Equal to Angle of Repose	46
on.	Embankment with Irregular Surcharge; Top of Embankment	70
20.	D 1 1 D 41	46
01	Embankment with Irregular Surcharge; Top of Embankment	70
61.	of Curvilinear Profile	48
	vii	320
	A11	

viii	CONTENTS
AIII	CONTENTS

BECT				PAGE
22.	Variation of Pressure with Height of Wall; Intens	ity	of	
	Pressure; Center of Pressure			50
23.	Intensity of Pressure			52
24.	Center of Pressure			5 5
25.	The Earth Pressure represented by a Line			5 5
	Effect of Cohesion on Pressure against Retaining Walls			58
27.	The Pressure of Passive Resistance of the Earth .		•	62
	CHAPTER III			
	RETAINING WALLS (Continued). ANALYTICAL MET	HOD	8	
28.	Rebhann's Analytical Method			67
29.	Formulas of Rankine and Weyrauch			74
30.	Comparison of Graphical Method with Formulas of Re	nki	ine	
	and Weyrauch			78
	CHAPTER IV			
	THE DESIGN OF RETAINING WALLS			
31.	Types of Retaining Walls			82
	Plain Retaining Walls			82
33.	Retaining Walls with Counterforts			84
34.	Retaining Walls with Buttresses			84
35.	The Equilibrium of Retaining Walls			85
36.				88
37.	Retaining Wall with Vertical Front and Back			89
38.	Retaining Wall with Vertical Front and Inclined Back			91
39.	Retaining Wall with Inclined Front and Vertical Back			91
40.	Retaining Wall with Faces inclined in Opposite Direction	ns		92
41.	Retaining Wall with Parallel Inclined Faces			93
42 .	Interpolation Method			93
43.	Retaining Walls with Counterforts			95
	a. Thickness of Wall Given			95
	b. Thickness of Counterfort Given			97
44.	Retaining Walls with Buttresses			97
	Retaining Walls with Inclined Buttresses			98
46.	Retaining Walls with Relieving Arches			99
47.	Determination of Width of Base by Analytical Methods			100

CONTENTS

ix

CHAPTER V

	D	AMS							
BECT	ION								PAGI
48.	Kinds of Dams				•		•		105
49 .	Direction of the Water Pressur	e		•	•				106
50.	Amount of the Pressure .						•		106
51.	Point of Application of the Pre	ssur	е.						108
52 .	Theoretical Profiles for Dams								111
53.	Triangular Profile								111
	Trapezoidal Profile								118
	Pentagonal Profile								115
	Dimensions of Trapezoidal an	d Pe	ntag	onal	Dam	s of	Vario	ous	
	Heights			•			•		118
57.	Practical Cross-sections .		•						121
58.		e.					•		121
59.		•					•		123
	Crugnola's Section			•					124
	Krantz's Section		-	·	•	•	•	•	125
	Author's Section	•	•	•	•	•	•	•	195

EARTH SLOPES, RETAINING WALLS, AND DAMS

CHAPTER I

THE STABILITY OF EARTH SLOPES

1. Measurement of Slopes. — When a trench is to be cut in soil for temporary use, the sides of the excavation are kept vertical by sheeting or bracing. But when the trench is to remain as a permanent piece of work, as in the construction of roads, railroads, canals, etc., artificial means for holding up the sides are usually out of the question, and to prevent the fall of the sides of the trench they are cut with a slope sufficient to enable the earth to maintain itself in place without support.

The slope of a cut or embankment is represented by the ratio of the base to the height of the right triangle formed by the slope and a pair of horizontal and vertical lines. Thus, a slope of 1 to 1 indicates that the base of the slope is equal to the height; the slope of $1\frac{1}{2}$ to 1 that the base is one and a half times the height; 2 to 1 that the base is double the height; and so on. In Fig. 1, AB represents the base and BC the height of a cut; its slope would be indicated by the fraction $\frac{AB}{BC}$, or, if BC = 1, simply by AB: 1.

It is not possible to give a general rule for the slope to which trenches should be cut, since in each individual case

there are so many particular conditions to be taken into consideration. In important works the slopes of the trenches

should be fixed, after careful examination with regard to all the local conditions. Only in minor works may simple practical rules be followed. Such are: the slope of 11 to 1 is usually adopted for trenches cut through loose soils; 1 to 1 for earth of ordinary consistency; 1 to 4 for soft rock; and 1 to 10 for hard and compact rock.

- 2. Equilibrium of a Slope. In general it may be said that the slope of any earth embankment is the result of three different forces: (1) the weight of the material of the slope; (2) the friction between its particles; and (3) the cohesive forces in the material, which keep together its various particles.
- 3. Weight of Soils. In the excavation of trenches through loose soils, it is the weight of the material that tends to cause the collapse of the sides. To determine the proper slope to be used, therefore, it is essential to know the weight of the material concerned.

The weight per cubic foot, or specific weight of earth or of any other substance, is obtained by weighing a mass of known dimensions and dividing by its volume. But earth when removed from its natural bed increases in volume, so that to correctly determine its specific weight it is necessary to measure very accurately the dimensions of the specimen mass of earth before excavation. Further, since moisture increases the weight of earth, the degree of its moisture content at the time the weight is determined should also be observed and recorded.


The following table gives the weight of some soils under different conditions of moisture content:

QUALITY O	F SOIL	_	WE	GH	T O	F 1	Cu. Ft.	IN	LBS
	dry						72	to	80
Common Loam	moist						70	"	76
Common Lossin	very moist						70	66	70
	full of water						104	"	112
O 1	(dry						90	"	106
Sand	very moist						118	"	128
Gravel							90	"	100

4. Internal Friction of Soils. — When a mass of soil is thrown into a pile, it will dispose itself with a certain maximum slope of surface, called the natural slope. This slope is characteristic for any particular material in a given condition, but varies with the nature of the soil and the amount of moisture which it contains.

In Fig. 2, let D be one of the particles of the earth on the surface of the slope after the pile has assumed its natural slope at an angle ϕ with the horizontal. Let W be the

weight of the particle D. Resolve the weight into its two components N and F respectively normal to and parallel to the natural slope AB. The force N presses the particle D against the rest of the soil, while the force F will have a ten-



dency to push it down the slope. The action of the force F is resisted by the friction between particle D and the rest of the soil, under the pressure N. Since friction does not depend upon the magnitude of the surface of contact, but only upon

4 EARTH SLOPES, RETAINING WALLS, AND DAMS

the total pressure, its relation to this pressure being expressed by a constant coefficient of friction f, we may conclude that the following relation is true:

$$F = fN. \tag{1}$$

But from the resolution of forces we know that

$$F = W \sin \phi$$

and

$$N = W \cos \phi$$
.

Substituting these values in equation (1) gives

$$W \sin \phi = fW \cos \phi$$
;

or, in other terms,

$$f = \frac{\sin \phi}{\cos \phi} = \tan \phi,$$

or the coefficient of friction is equal to the trigonometric tangent of the angle of natural slope of the earth.

The angle ϕ is called the angle of friction and is used to indicate the natural slope of the soils.

In practice the coefficient of friction of the soils is obtained by piling them up so that they may dispose themselves according to their natural slope without cohesive action, and observing the angle of this slope, given by the ration of the horizontal distance between any two points taken along the line of the natural slope, to their difference of level. This ratio is $\frac{1}{f}$ or cot ϕ .

In the following table are given the angles of natural repose, the coefficients of friction, and the slopes of various soils.

QUALITY OF SOIL		Angle of Repose	COEFFICIENT OF FRICTION	SLOPE OF REPOSE	
Sand	dry	35°	0.7002	1.4281	
	moist	40°	0.8391	1.1918	
	very wet	30°	0.5773	1.7320	
Siliceous	s {dry	39°	0.8098	1.2349	
soil	ls {moist	44°	0.9657	\1.0355	
Vegetab		40°	0.8391	1.1918	
soil		41°	0.8693	1.1504	
Clayey	dry moist	42°	0.9004	1.1106	
soil		44°	0.9657	1.0355	
Gravel	fround	30°	0.5773	1.7320	
	sharp	40°	0.8391	1.1918	

From this table it may be seen that in the same material the value of ϕ changes with the amount of moisture that the soil contains. Up to a certain limit, moisture tends to increase the value of ϕ , while a larger quantity of moisture tends to decrease the angle of repose. In fact, when a fine soil contains a large quantity of water, its particles run on each other, and the angle of friction may decrease to very near zero, as in silts and muds, which flow almost like water when sufficiently wet.

5. Cohesion in Soil. — In a firm bank of earth the force of cohesion holds together the particles of the material, so that they oppose a certain resistance to a force tending to separate them from one another. Generally speaking, the force of cohesion can be considered as the resistance offered by the earth when being cut.

This cohesive force varies with the quality of the earth; it is very small in sand and siliceous soils, and greater in clay and similar materials. When earth is removed from its natural bed, its cohesion is entirely destroyed; when the soil is piled up again, it will regain its lost cohesion only in a

small degree unless well rammed and wetted. Consequently the cohesive force of a soil should be considered to be active only when the soil is in its natural position, whereas the force of friction always exists, whether the soil be in its original position or in an artificial embankment.

On account of the cohesive force existing in soils in their natural position, the slopes of trenches can be left more nearly vertical than those of embankments, since in constructing embankments the soil has been removed from its natural bed and consequently the force of cohesion destroyed. The slope of a cut is sustained by the combined action of the forces of cohesion and friction, while the slope of an embankment is sustained only by the force of internal friction. It is necessary, however, to remember that little reliance should be placed in the force of cohesion in calculating the slopes of cuts, since atmospheric influences tend greatly to alter it.

In opening a trench through loose soil, the sides of the excavation on account of the cohesion of the material can be left vertical up to a certain height. This height depends upon the quality of the soil. For each soil there is a maximum height at which it can remain vertical when cut; on an attempt to increase the depth of the cut beyond this, the sides of the trench will collapse. It is usual, therefore, to express the cohesive force of a soil in terms of the maximum height at which it can remain vertical when cut. Thus it is said that a soil stands vertically to a height of 4.75 ft.; this means that if it is attempted to increase the vertical cut to say $5\frac{1}{6}$ ft., the sides will collapse.

The value of the cohesive force of earths is generally expressed by the force which it is necessary to apply in order to destroy this force per unit of surface. For the sake of simplicity in the calculations the force of cohesion is expressed

in terms of the specific weight of the earth multiplied by the coefficient of cohesion. In other words, the coefficient of cohesion of a soil is the ratio of the cohesion per unit of surface to the weight per unit of volume. Calling this ratio K, the force of cohesion per unit of surface will be expressed by

$$C = K_{\gamma}$$

where γ is the weight of the unit of volume of the soil considered.

In the following table are given the values of the force of cohesion in some soils as deduced from recent experiments:


QUALITY	or Soil	Cohesion in Lbs. per Sq. Fr.				
Ondinorm conth	(dry	110.8				
Ordinary earth	{ dry } moist	114.6				
Ol !!-	(dry	107.3				
Clayey soils	{ dry { moist	190.8				

GRAPHICAL DETERMINATION OF COHESION

6. The cohesive force in a bank of earth can be easily determined by graphical methods. Let a bank of earth be

represented as in Fig. 3 by its profile CBAG; and let it be assumed that:

- 1. The mass of earth is homogeneous throughout;
- 2. The earth contains natural moisture;
- 3. The force of cohesion is uniform throughout the mass:

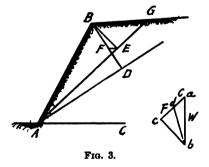

4. The stratification of the earth in the embankment does not affect the pressure due to the weight of the material;

5. The portion of the earth which tends to separate from the embankment will slide along a plane surface.

Properly speaking the last assumption is not correct, because the sliding surface is generally cylindrical, being formed by a straight horizontal line as generatrix moving along a cycloid as directrix. But in order to facilitate the calculations it is here supposed that the sliding surface is a plane. The results obtained in the use of this assumption are very close to those obtained by the theoretically exact method. Besides, the assumption is on the side of safety, as it neglects some of the resisting forces, while the destructive forces are all taken into consideration.

Then ABCG being a bank of earth whose face has the slope AB, and ϕ being the angle of natural repose of the material: since the slope AB makes with the horizontal line AC an angle greater than ϕ , the earth must be endowed with cohesion, for otherwise the slope AB would coincide with the slope of repose. In order to compute the value of this force of cohesion which keeps in equilibrium the portion of the earth between the slope AB and the slope of repose AD, it is supposed that the upper part of the mass of earth has a tendency to slide down along a plane represented in the figure by the line AG; then the prism ABG will be under the action of four forces which are in equilibrium, as follows:

- 1. The weight W of the prism ABG;
- 2. The reaction N that the lower mass exerts upon the prism ABG, in a direction perpendicular to the plane of sliding;
- 3. The friction F along the plane AG, depending upon the pressure N' equal and opposite to the reaction N. This force of friction opposes the descending movement of the prism;

4. The resistance offered by the cohesion C acting in the direction of AG which tends to oppose the sliding of the prism.

Draw the force polygon: along a vertical line lay off a segment ab equal to the weight W of the sliding prism; from a draw the line ac parallel to AG and from b draw a normal to AG. Since the forces are in equilibrium the polygon abc will be a closed one. The line ac represents the forces which prevent the sliding of the prism, which are the friction and the cohesion. Therefore ac must be equal to F + C. Suppose d to be the dividing point between these two quantities, so that cd represents the friction and da the cohesion; join b and d. The forces F and N are perpendicular to each other and their resultant Q makes with N an angle equal to the angle of repose ϕ , or in other words the angle cbd must be drawn equal to ϕ .

Let the length of the embankment be equal to unity, *i.e.* let the depth of the prism normal to the plane of the paper be equal to 1. From the point B drop the perpendicular BE on AG; then the weight W of the prism will be given by

$$W = \frac{1}{2} \gamma A G \times BE,$$

where γ is the weight of the material per unit of volume.

To represent the forces by straight lines, it is necessary to assume a scale. Let in this case the scale of reduction for the forces be $\frac{1}{2} \gamma A G$ so that in the construction of the force polygon we shall have

$$W = BE$$
.

Now, AD being the natural slope, BD a perpendicular from B upon AD, and EF an horizontal line drawn from E, the triangle BEF will be equal to the triangle dba of the

force polygon. For, BE = W = ab, $\angle BEF = \angle bac$ having the sides respectively perpendicular, $A \angle EBF = \angle abd$ (because cba = GAC having their sides respectively perpendicular, and $\angle cbd = DAC = \phi$, hence $\angle dba = GAD = EBF$), which makes the triangles equal, having one side and two angles equal. Therefore da = EF. But in the force polygon

$$ca = cd + da = F + C,$$

and since the construction made cd = F, we have by subtraction

$$da = C$$
, and consequently $C = EF$.

Reducing from the assumed scale, we find that the force of cohesion, or the resistance due to the cohesion, is

$$C = \frac{1}{2} \gamma AG \times EF.$$

Since by assumption the force of cohesion is uniformly distributed, it acts at all points along the surface AG and its value per unit of surface will be

$$\frac{C}{AG} = \frac{1}{2} \gamma EF.$$


By definition, the coefficient of cohesion is the quantity by which it is necessary to multiply the specific weight of the material in order to obtain the force of cohesion per unit of surface. But γ being the unit of weight of the material, the coefficient of cohesion K is $K = \frac{1}{2} EF$.

It is evident that the coefficient of cohesion K is given in terms of the line EF, which varies with the different positions assumed by the probable planes of sliding. Consequently it will be interesting to determine what direction of AG gives the greatest value of K.

Suppose the plane of sliding AG to turn around the point A, Fig. 4. The line EF is easily determined for each new

position of AG. The angle BEA will always be a right angle; therefore the point E will describe a circular arc described on AB as diameter. This semicircle passes through D, as $\angle BDA$ is a right angle. Since BD is a fixed line, because AD, the slope of repose, is fixed, it is evident that EF will reach its greatest value when E falls in the middle of the arc BD, or at E'. Consequently we have: maximum value of $K = \frac{1}{2} E'F'$, and this is obtained when AG falls upon the line AG' bisecting the angle BAD.

This means that the cohesion required to hold the mass from sliding reaches its greatest value when the probable plane of sliding bisects the angle between the slope AB and the plane of natural repose of the material AD. The plane AB is therefore to be considered

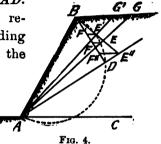

as the most probable plane of sliding, the plane along which the prism of earth which tends to split off from the embankment would separate. In the considered embankment, if the force of cohesion of the earth is greater than $\frac{1}{2} E' F' \gamma$, the earth can be maintained under the slope AB, and $\frac{1}{2} \gamma E' F'$ will then represent the force of cohesion actually developed along the probable plane of rupture.

In Fig. 4, draw the line BE' perpendicular to AG' and produce it to E'' on the plane of natural repose; from this point E'' draw the horizontal line E''F''.

$$AE'' = AB$$
 and $E''F'' = 2E'F'$.

For, since E' is the middle point of the arc BD, the angle BE'A is a right angle, as is also the angle AE'E''; and AG being the bisector of the angle BAE'', the triangles

BAE' and EAE'' are equal, which gives AB = AE'', and BE' = E'E'', or BE'' = 2BE'. The triangles BE'F' and BE''F'' are similar, having one angle common and the opposite sides parallel. Since the side BE'' is equal to twice BE', and in similar triangles all sides are in the same proportion, we find that E''F'' = 2E'F'. Consequently the maximum value of the coefficient of cohesion K will be

$$K = \frac{1}{2} E'F' = \frac{1}{4} E''F''$$
.

The graphical construction for finding the coefficient of cohesion may be described as follows: from B draw a perpendicular to AD, the line of natural slope; then make AE'' = AB and from E'' draw E''F'' horizontally to intersect BD in F''. The coefficient of cohesion K is

$$K=\frac{1}{4}E''F''$$
.

In the right-angled triangle F''DE'' the angle at $E'' = \phi$, because CAE'' and AE''F'' are alternative interior angles. Therefore $DE'' = E''F'' \cos \phi$ and, since $K = \frac{1}{4}E''F''$, or E''F'' = 4 K, we find,

$$DE'' = 4 K \cos \phi.$$

Thus, the coefficient of cohesion K can be expressed in terms of DE'',

$$K = \frac{DE''}{4\cos\phi}.$$

THE PARABOLA OF COHESION; PRACTICAL APPLICATIONS

7. The preceding has dealt with the fact that an earth bank is in equilibrium so long as its side does not exceed a certain slope. We now will be concerned with the further observation that the greater the height of a bank or pile, the flatter will be the limiting slope. This observation may

be put more precisely by saying that, in a general way, the limiting slope is inversely proportional to the height of the bank.

It will be interesting to study the changing position of the top of the embankment B, as the embankment increases in height, supposing it to be maintained at the maximum slope. This will afford a simple way of determining the proper slope to be given to a bank which is to remain in equilibrium under the combined forces of friction and cohesion.

In a particular bank of earth the forces of friction and cohesion have a constant maximum value, *i.e.* the value of ϕ and K are constant throughout the mass.

From B, Fig. 5, draw BD perpendicular to the line of

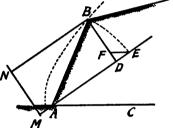


Fig. 5.

natural slope and take AE = AB; produce the line AE and lay off a segment AM = DE; at M erect a perpendicular to the ME and from B draw the line BN parallel to the natural slope AE. It will result, then, that

$$BN = MD = EA = AB$$

and

$$AM = DE = 4 K \cos \phi$$

which is a constant quantity because both ϕ and K are constant. The straight line MN, therefore, has a fixed position. Since the line BN is always equal to AB, it follows that the point B is equidistant from the fixed point A and the fixed line MN, no matter what height be assigned to the bank. This equality, it happens, is the character-

14 EARTH SLOPES, RETAINING WALLS, AND DAMS

. istic of a parabola. The locus of point B, the top of the bank of maximum slope, is therefore a parabola whose focus is at A and whose directrix is the line MN; the slope of repose, AD, is the axis of the parabola.

The parabola of cohesion gives, for any given bank of earth, the various slopes of equilibrium corresponding to

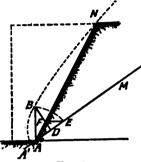


Fig. 6.

the different heights. Thus, for instance, in Fig. 6, draw from A a perpendicular to the line AC; the point of intersection with the parabola will determine the height up to which a vertical face will remain in equilibrium. Again, the parabola of cohesion indicates that for heights less than this, the earth will stand even inclined for-

ward from the perpendicular, a phenomenon which is illustrated along the edges of rivers and creeks, where the bank is undercut by the stream.

The following examples of the use of the parabola of cohesion may be serviceable to the student:

1. It is desired to know the slope which shall be given to a bank of earth 25 ft. high, when it is known that the material can stand with a vertical face up to a height of 7 ft.


From A, the foot of the embankment, Fig. 6, draw a vertical line and make AB = 7 ft., then draw the line AM on the slope of repose, making with the horizontal an angle equal to ϕ . On AM lay off a segment AE = AB, from B draw the line BD perpendicular to AM, from E the horizontal line EF; then $\frac{1}{4}EF = K$, the coefficient of cohesion. Produce AM and lay off a segment AA' = DE and describe

a parabola with vertex halfway between A and A', and with focus at A. Then drawing a horizontal line 25 ft. above the base, where this intersects the parabola, we find the top edge of the bank N. Connect N with A; the slope AN is the maximum slope of equilibrium corresponding to the height of 25 ft.

- 2. If instead of the vertical height we are given K, the coefficient of cohesion of the material, the solution is almost the same, the only difference being that the parabola is located by making the focal distance $A = A' = 4 K \cos \phi$.
- 3. The Stepped Slope. In high embankments instead of using a single slope it is usually preferred to cut the

earth in successive small slopes alternate with benches. The parabola of cohesion gives an elegant solution of the problem of proportioning the successive slopes.


Let h, Fig. 7, be the total height of the embankment; no, op, pq, the height of the successive equal steps; and ϕ the angle of natural repose of the material.

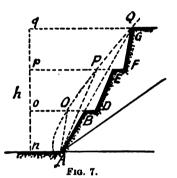

Draw the parabola of cohesion as in any other case (the coefficient of cohesion or equivalent information being given, as in the preceding examples). From the points o, p, and q, draw horizontal lines, intersecting the parabola at O, P, Q, respectively. Connect A with Q, then the line AQ represents the slope of equilibrium for the total height h of the embankment. Connect also A with O and P. The lines AO and AP will represent the slopes corresponding to one

and two steps respectively. Produce the line oO to meet at B the slope AQ and lay off a segment BD equal to the given width of the bench or berm. From D draw DE parallel to the slope AP, intersecting the line pP produced at E, and again lay off a horizontal segment EF equal to the required width of berm. Finally from E draw a parallel to the slope E until it meets at E the line E the line E the line E will be the required profile of the cut.

4. The Slope of Equal Stability. — The parabola of cohesion also affords an easy solution of the problem of determining in a graphical way the slope of equilibrium

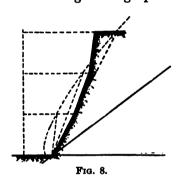

of equal stability for a bank of earth. The slope of equal stability differs from the slope of equilibrium corresponding to a certain height; while the latter has been considered as a straight line, the former is a curve. It is observed in trenches that have originally been cut vertical, and then were exposed to atmos-

pheric influences for a long time, that the face assumes a curved outline; this is the slope or surface of equal stability.

Suppose that in Fig. 7 the total height h of the embankment was equal to 21 ft., and each one of the various sections no, op, pq equal to 8 ft.; AQ then is the proper slope for the total height of 24 ft., AP for the height of 16 ft., and AO for the height of 8 ft. The lowest step was given the slope proper to the height of 24 ft., the total height of the embankment, and thus was drawn the line AB. The remaining height from B to the top of the embankment

is 16 ft., and for the second section was used the slope proper to the height of 16 ft., drawing DE parallel to AP. For the upper portion was used the slope proper to an embankment 8 ft. high by drawing FG parallel to AO.

If it were not for the berms, the various slopes would have formed a broken line, as indicated in Fig. 8. It is evident that the smaller the steps into which the total height of the embankment is divided, the more closely the broken line approximates to a curve. A division into seven steps is shown in Fig. 9. When the points are taken at an infinitesimally small distance from one another, the resultant

slope of equilibrium, a slope of equal stability at all heights, becomes a smooth curve.

Once the slope proper to a given height of a bank of a given quality of soil having both friction and cohesion is known, it is then an easy matter to determine the safe slope for a bank in the same soil



Fig. 9.

of any different height. Evidently, also, if it is desired to determine the slope which will call into play only $\frac{1}{2}$, $\frac{1}{8}$, $\frac{1}{4}$ of the total force of cohesion, so that the bank is designed with a factor of safety of 2, 3, 4, etc., in respect to its force of cohesion, it is only necessary to find the slope of equilibrium or the curve of equal stability for a coefficient of cohesion taken at $\frac{1}{2}$, $\frac{1}{8}$, $\frac{1}{4}$ of the actual value. For this purpose the parabola of cohesion is employed in the same manner as in the preceding cases; the focal distance, however, instead of being taken equal to $4 K \cos \phi$, is made $\frac{1}{2}$, $\frac{1}{3}$, $\frac{1}{4}$ of this value.

ANALYTICAL CALCULATION OF COHESION

8. Slope without Surcharge. — The influence of the cohesion can be calculated also by analytical methods. Consider an embankment under the slope AB, and denote by

 ϕ the angle of repose,

 β the angle included between the slope AB and the plane of natural repose represented by the line AD,

l the length of the slope AB,

h the vertical height of the embankment, and

K the coefficient of cohesion.

From the preceding section we know that, in Fig. 5,

$$AB = AE = AD + DE$$

but DE = AE

$$DE = AK\cos\phi$$
 and $AD = AB\cos\beta = l\cos\beta$.

Then the length of the slope of the embankment will be

$$l = l\cos\beta + AK\cos\phi,$$

from which is deduced the value of the coefficient of cohesion,

$$K = \frac{l(1 - \cos \beta)}{4 \cos \phi}; \qquad (a)$$

but

$$\cos\beta = \cos^2\frac{\beta}{2} - \sin^2\frac{\beta}{2},$$

and

$$l - \cos \beta = l - \cos^2 \frac{\beta}{2} + \sin^2 \frac{\beta}{2};$$

and since

$$l - \cos^2\frac{\beta}{2} = \sin^2\frac{\beta}{2},$$

we shall have

$$l - \cos \beta = 2\sin^2 \frac{\beta}{2}.$$

Substituting this value in the formula (a), we have

$$K = l \frac{\sin^2 \frac{\beta}{2}}{2\cos \phi}.$$
 (b)

Thus the coefficient of cohesion K is given by the length of the slope of the embankment multiplied by the square of the sine of half the angle between the slope and the plane of natural repose, divided by twice the cosine of the angle of repose ϕ .

The coefficient of cohesion can be found also in terms of the height of the embankment. From Fig. 5 it is easily seen that $h = l \cos \theta$, where

$$\theta = 90 - (\beta + \phi);$$
 then $\cos \theta = \sin(\beta + \phi)$

$$l = \frac{h}{\sin(\beta + \phi)}.$$

and

Substituting this value in equation (b), we shall have the coefficient of cohesion K in terms of the height of the embankment and both the angles ϕ and β :

$$K = \frac{h \sin^2 \frac{\beta}{2}}{2 \sin(\beta + \phi) \cos \phi},$$
 (c)

or

$$h = 2 K \frac{\sin(\beta + \phi)\cos\phi}{\sin^2\frac{\beta}{2}}.$$
 (d)

The equations (c) and (d) involve only the four quantities K, h, β , and ϕ , so that when any three of them are given the fourth may be calculated.

The force of cohesion is often given in terms of the maximum height at which the earth will stand with vertical face.

For a vertical face, $\beta + \phi = 90^{\circ}$. Call h' the value of l, or the height at which the embankment remains vertical due to the cohesion. Observe that

$$\cos \phi = \sin (90 - \phi) = 2 \sin \frac{(90 - \phi)}{2} \cos \frac{90 - \phi}{2}.$$

Substitute these values in equation (b); then

$$K = \frac{h'}{4} \frac{\sin^2 \frac{90 - \phi}{2}}{\sin \left(\frac{90 - \phi}{2}\right) \cos \left(\frac{90 - \phi}{2}\right)} = \frac{h'}{4} \tan \left(45 - \frac{\phi}{2}\right), \quad (e)$$

from which is deduced

$$h' = 4 K \cot \left(45 - \frac{\phi}{2}\right) = 4 K \tan \left(45 + \frac{\phi}{2}\right)$$
 (f)


Putting in equation (c) the value of K given by equation (f), we obtain the value of h in terms of h':

$$h = \frac{h'}{2} \frac{\sin (\beta + \phi) \cos \phi}{\tan \left(45 - \frac{\phi}{2}\right) \sin^2 \frac{\beta}{2}}.$$
 (g)

This formula gives the value of h when h', β , and ϕ are given; or it can be used for calculating the angle $\beta + \phi$ to be given to a slope when h', ϕ , and h are known.

9. Surcharged Slope. — Consider a mass of earth limited above by a surface BD which makes an angle α with the horizontal line passing through B. The embankment will then be surcharged by an additional weight W per unit of surface, and the limiting height for a given slope $\beta + \phi$ will be decreased.

In Fig. 10, AD represents the plane of sliding of the prism ABD, W its weight with surcharge included, and

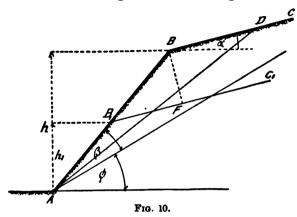

 γ the unit of weight of the earth. The total weight of the prism is

$$W = \gamma \frac{AB \times BD}{2} \sin (\beta + \phi - \alpha) + W \times BD,$$

or making $\gamma = 1$ and factoring,

$$W = \frac{AB \times BD}{2} \sin (\beta + \phi - \alpha) \left(1 + \frac{2W}{AB \sin (\beta + \phi - \alpha)} \right)$$

But

$$AB = \frac{h}{\cos(90 - \beta - \phi)} = \frac{h}{\sin(\beta + \phi)},$$

and substituting this,

$$W = \frac{AB \times BD}{2} \sin (\beta + \phi - \alpha) \left(1 + \frac{2 W \sin (\beta + \phi)}{h \sin (\beta + \phi - \alpha)} \right),$$

which means that the weight of the sliding prism increased by the surcharge by a quantity $\frac{2 W \sin (\beta + \phi)}{h \sin (\beta + \phi - \alpha)}$, the maximum that the weight of the sliding prism increased

mum height h at which the bank will stand can be deduced from equation (d) corrected by this factor, thus:

$$\frac{2 K \sin (\beta + \phi) \cos \phi}{\sin^2 \frac{\beta}{2}} = h \left(1 + \frac{2 W \sin (\beta + \phi)}{\sin (\beta + \phi - \alpha)} \right),$$

from which is deduced the value of h,

$$h = 2 K \frac{\sin (\beta + \phi) \cos \phi}{\sin^2 \frac{\beta}{2}} - \frac{2 W \sin (\beta + \phi)}{\sin (\beta + \phi - \alpha)}$$

If an earth embankment can remain vertical to the height h_1 , and then is surcharged with an equally distributed weight W per unit of surface, the height at which it will now stand vertical is decreased in the ratio $\frac{2 W \sin (\beta + \phi)}{\sin (\beta + \phi - \alpha)}$

This factor can be marked directly on the slope by making $BB^{\ell} = \frac{2 \ W}{\sin \left(\beta + \phi - \alpha\right)}$, which is obtained by drawing a line B_1C_1 parallel to BC at a distance BF from B equal to $2 \ W$. When the surface above BC is horizontal, $\alpha = 0$ and $BF = 2 \ W$ gives directly the decreased height of the slope.

EARTH SLOPES IN PRACTICE

10. In public works it is a common practice to use the slope of 1 to 1 for cuts and the slope of 1½ to 1 for fills. The convenience of such a general rule is founded upon the fact that it is impracticable to calculate the proper slopes for the various cuts and fills encountered in any ordinary piece of work. Since the character of the soil changes continuously along the line of the work, it would be a very slow and expensive matter to calculate the proper slopes; and the

resulting delays and the increased cost of work would not bring any material benefit. For this reason short practical rules are always followed. But the convenience of the practical rules should not mislead the engineer when he has to deal with a special problem, as, for instance, making a deep cutting for the approaches of a tunnel in railroad work, or for a canal. In these and similar cases, giving to the cuts their proper slopes will result in great savings both in the original cost of construction and in the cost of maintenance.

The slope of $1\frac{1}{2}$ to 1 commonly given to fills is a safe slope in most cases. The earth in a fill stands up only by virtue of the force of friction, since the force of cohesion has been destroyed in the removal of the soil from its natural bed. From the table given on p. 5 it is seen that the natural slope of most of the common soils is smaller than 1.5. Hence the slope of $1\frac{1}{2}$ to 1 as generally used may be considered safe. But there are soils, as rounded gravel, for instance, that have a natural slope as high as 1.7 to 1; consequently, when such materials are used in forming an embankment, a slope of $1\frac{3}{4}$ to 1 should be given instead of the usual slope of $1\frac{1}{4}$ to 1.


The slope of $1\frac{1}{2}$ to 1 given to a certain embankment may be considered a safe slope, when the material is dry or contains only a small percentage of water; but when the soil contains a large quantity of water it may assume a smaller slope. Thus, in the same table, p. 5, the natural slope for sand when dry is given as 1.43 to 1, when moist as 1.19 to 1, when very wet, 1.73 to 1. From this it can be seen that in determining the slope to be given to an embankment, chiefly composed of sand, it is safer to give a slope of 2 to 1, instead of the usual slope, unless local conditions insure the prompt discharge of water and make it practically impossible for the embankment to become saturated with water.

It is in the cuts that practical rules should be applied most cautiously. If a bank of earth is left with the slope of 1 to 1, while the angle of repose of all loose materials is smaller than 45°, it follows that the engineer takes advantage of the cohesive force of the soil to maintain the bank. From the parabola of cohesion we learn that the higher the bank of earth, the smaller is its slope of equilibrium. is evident that it would be more economical to cut the sides of the bank to a compound or curved slope, closely following the curve of equal stability, instead of giving to the total height of the embankment a single slope, since the latter involves a larger amount of excavation. is not necessary that the slope of equal stability be designed for the earth in equilibrium; it may be designed with a certain factor of safety in respect to the cohesive power of the soil, this factor of safety being assumed according to the local conditions, as will be discussed farther on.

Using for deep trenches side slopes following the curve of equal stability, designed with a factor of safety of 2, for instance, only one half the available force of cohesion is brought into play all through the mass of the bank of earth, and consequently also at the bottom of the bank. In the practical slope of 1 to 1 there is a very large factor of safety in the upper part of the bank, which means that there is a large amount of useless excavation done on the upper section of the cut, while near the foot of the bank the force of cohesion is taken almost at the equilibrium point. The foot of the bank is therefore the most dangerous point, the one most liable to a collapse. In actual work it is the lower portion of the bank that always collapses first, and consequently the smallest slope should be given to the lower part of the cut.

This is obtained only by designing the slope according to the curve of equal stability.

Figure 11 represents the various slopes of equal stability and the practical slope of 1 to 1, for a bank of earth 50 ft. high, in which the coefficient of cohesion was assumed to be equal to 1.3, and the angle of natural repose = 30° . The line AB indicates the slope of 1 to 1; the slope of equal stability designed with the value of cohesion taken at the equilibrium point is indicated by AC, while AD and AE

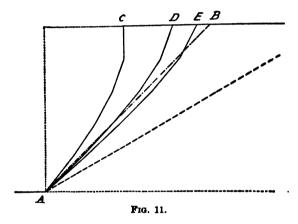

represent the slope designed with factors of safety 2 and 3 respectively. Comparing these various slopes it is seen that the slope of equilibrium forms an angle of 50° with the horizontal at the lowest portion of the cut, while the slope of equal stability designed with a factor of safety of 2 forms an angle of 43° 15′, and the slope designed with a factor of safety of 3, an angle of 40° 15′.

The amount of excavation back of the vertical for a bank 1 ft. in length will be 1250 cu. ft. for the slope of 1 to 1, 873.5 cu. ft. for the slope of equilibrium, 1165.5 for a slope with fac-

tor of safety 2, and 1260 cu. ft. for the slope with a factor of safety 3. From this it is seen that the usual slope of 1 to 1 requires almost the same amount of excavation as a slope designed with a factor of safety equal to 3; while the former has an angle of 45°, the second forms with the horizontal an angle of 40° 15′. A curve of equal stability in which the lowest portion makes an angle of 45° with the horizontal would require only 950 cu. ft. of excavation, a saving of nearly $\frac{1}{8}$ the total amount.

If such economy can be obtained in cuts of only 50 ft., it is easy to imagine the enormous amount of excavation which could be saved by using the curve of equal stability in cutting very deep trenches, as for instance at the great cuts of the Panama Canal, 300 ft. deep and extending several miles in length.

Owing to the fact that in deep trenches heterogeneous material is encountered as a rule, it would be very difficult to determine the force of cohesion of the various materials and integrate the various slopes of equal stability in a single curve best suited to the particular case under consideration. But the engineer should generally adopt a slope proper to the material endowed with the smallest cohesive force. In doing this he must not forget that the lower strata of the bank are most liable to collapse, so that when a very loose material is met with in the upper strata, the cut may be made with a slope greater than if the same material were encountered farther down.

Since the force of cohesion in any embankment is greatly altered by atmospheric influences, it is safest to rely only on a fraction of it, or in other words to use the force of cohesion with a certain factor of safety, 2 or 3, according to local conditions. A factor of safety of 2 would give sufficient secur-

ity under the climatic conditions of this country, while a factor of safety of at least 3 should be used in countries, like Panama, situated in the tropical regions where heavy rains occur in some part of the year so frequently as to entirely permeate the soil.

CHAPTER II

RETAINING WALLS

11. Theories of Earth Pressure. — Retaining walls are erected for the purpose of supporting earth embankments or the sides of cuts, at slopes steeper than would be in equilibrium without artificial support. In a bank which is held up by a retaining wall, the internal forces (friction and cohesion) are not sufficient to keep the face from caving. Consequently the bank presses against the wall with a certain intensity of pressure. The proportions of the wall will, of course, be determined by the amount of this pressure, so that in order to design a retaining wall, the pressure which the structure has to resist must first be calculated.

Although many authors have elaborated theories of earth pressure against walls, all these theories can be classified in two groups: (1) the theory of the sliding prism, and (2) the analytical theory.

The theory of the sliding prism originated with Vauban, a general in the French army in 1687. General Vauban assumed that the natural slope is constant for all soils and equals 45°, and that the triangular prism of soil above the plane of repose, sliding on that plane, causes a thrust equal to the actual thrust against the retaining wall. He resolved the weight of this sliding prism into components normal and parallel to the natural slope, and considered the second component as the real pressure against the wall.

Vauban's theory was improved by Belidor in 1729. dor considered that the pressure against a wall is not equal to the tangential component of the sliding prism, as stated by Vauban, but is less than this component by a certain amount due to the friction of the sliding prism on the soil Finally, Captain Coulomb of the French army, in the year 1773, still further developed the theory of the sliding prism. He resolved the reaction of the wall (equal and opposite to the pressure) and the weight of the sliding prism into their components parallel and normal to the plane of rupture. He made the difference of the components parallel to the plane of rupture equal to the frictional resistance opposed by the mass of earth below the sliding prism, and from this equation deduced the value of the total pressure against the wall. This theory, later perfected by Prony, François, and Poncelet, is the one most commonly used; it is generally known as Coulomb's theory of retaining walls, or the theory of the sliding prism.

In the year 1856, Professor W. M. Rankine deduced the value of the pressure of the earth against a retaining wall by means of a new and more scientific principle. He investigated the conditions of equilibrium of an interior element in a homogeneous mass of earth deprived of cohesion and unlimited in every direction, and thus determined the pressures erected upon the bounding surfaces of the element. From this, when a plane surface limiting a mass of earth was given, the direction, magnitude, and position of the total pressure upon this plane surface could be easily determined. Such an analytical method was followed by Moseley, Winkler, Levy, Considère, and Weyrauch. However, it has remained largely in the field of scientific investigations and



has not been so extensively used for practical purposes as the theory of the sliding prism.

In this and the following sections is given a method for determining earth pressure graphically, according to the method of Professor Rebhann, based upon the principle of the sliding prism.

GRAPHICAL METHOD AFTER REBHANN

- 12. Let a bank of earth held up by a retaining wall be represented by its profile *ABDC*, Fig. 12, and let the following assumption be made:
- 1. The pressure against the wall is caused by a prism of earth which tends to separate from the bank and slide along a plane surface. Such an assumption is not strictly accurate, because the surface of sliding or surface of rupture is not a plane but a cylindrical surface, having a cycloid as directrix. But by assuming the surface of sliding to be a plane surface, we greatly simplify calculations and the results are very close to the actual facts, erring a little on the safe side (since the sliding prism as assumed is a little larger than the mass which actually tends to split off).
- 2. The specific weight of the material be uniform all through the mass of earth forming the embankment. This assumption also is not strictly correct, because the specific weight varies with depth, humidity, etc.; but the laws of the variation are still unknown and the error involved in considering the embankment to be of constant specific weight is so small as to be negligible in practice.
- 3. The earth is devoid of cohesion. Usually the earth behind a retaining wall is filled in after the wall is built, so that in most cases the cohesive force has been entirely destroyed.

In Fig. 12, AB is the back of a retaining wall supporting a mass of earth limited above by a cylindrical surface whose profile is represented by an irregular line as shown.

Since it is assumed that the earth is entirely devoid of cohesion, the prism of earth above the plane of natural repose would have a tendency to separate from the mass, and slide along the plane of repose. But in order to slide, the prism would also slide along the

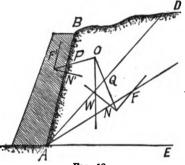


Fig. 12.

face AB, the back of the wall, and it thereby develops an upwardly directed force of friction which will counteract in part the falling tendency of the prism. In consequence, instead of sliding along the plane of natural slope it would slide along the plane AD, making with the horizontal AE an angle greater than the angle of natural repose ϕ .

Let P = the pressure against the wall,

 ϕ = the angle of natural repose of the earth,

and ϕ' = the angle of friction between earth and the masonry of the wall.

Then the forces acting upon the prism ABD are: the weight W of the prism; the reaction N of the lower mass of earth, normal to the plane of sliding; the friction F produced by the normal pressure N; the reaction N' normal to AB, which the wall opposes to the prism; and the friction F' between wall and earth, depending upon N'.

We know that

 $F = N \tan \phi$,

since ϕ is the angle of friction between any two portions of the earth; also

$$F' = N' \tan \phi'$$
.

The resultants P and Q of the pair of forces F', N', and F, N, are

$$Q = \sqrt{F^2 + N^2}$$

and

$$P = \sqrt{F'^2 + N'^2}.$$

Substituting for F and F' their values, we have

$$Q = N\sqrt{1 + \tan^2 \phi}$$

and

$$P = N' \sqrt{1 + \tan^2 \phi'}.$$

But

$$1 + \tan^2 \phi = \sec^2 \phi = \frac{1}{\cos^2 \phi}$$

and

$$1+\tan^2\phi'=\sec^2\phi'=\frac{1}{\cos^2\phi'},$$

so that

$$Q = N\sqrt{\frac{1}{\cos^2\phi}}$$

and

$$P = N' \sqrt{\frac{1}{\cos \phi'}},$$

or

$$Q = \frac{N}{\cos \phi}$$
 and $P = \frac{N'}{\cos \phi'}$.

This means that the prism ABD is in equilibrium when the angles made by the resultants Q and P with the normals are respectively equal to ϕ and ϕ' , and intersect the line of action of the weight of the prism in the same point O.

We may deduce the general rule that the pressure P of the earth against the back of the wall is never normal to the

back of the wall, but has a downward slope, making with the normal an angle ϕ' equal to the angle of friction between the earth and the wall.


13. Values of ϕ and ϕ' . — It is very easy to find by experiment the value of ϕ for different soils, but it is not so easy to find the value of ϕ' because we have no satisfactory method of measuring it, and because it varies greatly with the different kinds of earth and masonry.

Colonel Andé assumes $\phi' = 26^{\circ} 34'$; Poncelet and Moseley have given to ϕ' the values of 27° 2′, 18° 47′, and 21° 48′; Scheffer, Rebhann, Otto, and Curioni assume $\phi' = \phi$; while still others make $\phi' = \frac{1}{2} \phi$. The older authors, as Coulomb, Prony, and others, did not consider ϕ' at all, thus making it Following Professor Rebhann we shall assume equal to zero. The surface of the back of the wall never is smooth, but rather is very rough. When the earth backing is rammed against this rough surface, it fills all the cavities and recesses in the masonry. If sliding took place, evidently the earth could not disengage itself from the irregularities in the masonry, but rather a layer of earth just along the masonry would stay in place, and the prism would slide along this layer of earth. This condition would be a sliding of earth on earth, for which the friction factor is ϕ . It seems proper, therefore, to assume that the friction between earth and back of wall be the coefficient $\phi' = \phi$.

14. Location of Plane of Rupture. — Consider an embankment in equilibrium or just before the caving of its face; suppose its length (in Fig. 13 perpendicular to the drawing) is 1.

Let AD represent the plane of rupture. We will denote by β the angle that the plane of rupture makes with the

natural slope. The prism BAD, sliding along the planes AD and AB, acts as a wedge, developing the pressures P and Q, whose directions depend upon the corresponding angles Φ

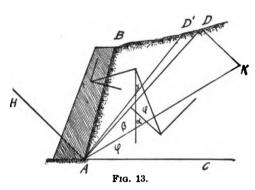

and ϕ' , and whose intensities depend upon the weight W of the prism. We shall limit our investigation to the forces W, Q, and P. Their directions are first to be found, for when these are known, the numer-

ical amount of Q and P is easily calculated, thus:

Draw a vertical line (Fig. 14) of length ab = W; from a draw a parallel to P, and from b a parallel to Q. Then the triangle abc is the triangle of forces, bc representing the value of Q and ac the value of P.

It remains to fix the plane of rupture AD, in order to determine the directions of P and Q. Suppose the plane AD

turns around A by a very small angle $d\beta$; represent its new position by AD' ($d\beta$ is exaggerated in Fig. 14). The weight W of the prism will be diminished by a very small quantity dW, represented by bb' in the triangle of forces (Fig. 14). Professor Rebhann, to whom this demonstration is due, assumes that upon slightly varying the plane of rupture the pressure P remains con-

Fig. 14.

stant and only Q varies, its new value being Q'; Q' is represented by cb' in the triangle of forces (Fig. 14), the angle bcb' being equal to $d\beta$.

In Fig. 13 the angle which Q makes with N (the normal to the plane of rupture) is equal to ϕ , the angle of internal friction of the soil, equal to the angle of repose. Now the angle $a = \gamma + \phi$, being an exterior angle of the triangle. Also $a = \phi + \beta$, as the angles a and the angle $a + \beta$ have their sides respectively perpendiculars. Hence we have

$$\gamma = \beta$$
.

Turning the plane of rupture around A by an angle $d\beta$, the resultant Q is turned through a corresponding angle $d\gamma$, and for the same reason as above we will have

$$\beta + d\beta = \gamma + d\gamma,$$

$$\beta = \gamma,$$

$$d\beta = d\gamma.$$

and since

therefore

But the angles $d\gamma$ and bcb' are equal, having their sides respectively parallel; in consequence

$$d\beta = bcb'$$
.

In the construction of the triangle of forces we may use such a scale that Q be represented by the line

$$bc = AD$$
.

In this case

$$\Delta bcb' = \Delta ADD',$$

and having already assumed that

$$W = ab$$
 and $bb' = dW$,

we will have

area
$$ABD$$
: area $ADD' = ab : bb'$,

because the weights of prisms of the same material and equal height are to each other as the areas of their bases.

Further, from the triangle of forces we have

area abc: area bcb' = ab : bb'.

Combining the two proportions gives the proportion

area BD: area AADD' = area abc: area bcb'.

Since we have drawn the triangle of forces to such a scale

area
$$ADD' = \text{area } bcb'$$
,

it will result that

area BAD = area abc.

Therefore Q makes with the normal to AD an angle ϕ and with the vertical W an angle $DAC - \phi = \beta$.

If we apply the triangle of forces to the cross section in Fig. 13, in such a position that b coincides with A, and if we then turn it through an angle $90 - \phi$, the line bc = AD will coincide with AD and ba with AK; the line ca, which in the original position made an angle $90 - \phi'$ with the back of the wall, after rotation will make an angle

$$90^{\circ} - \phi + 90^{\circ} - \phi' = 180^{\circ} - (\phi + \phi'),$$

and consequently the line ac will fall upon DK. Its direction is parallel to the line AH drawn from A at an angle $\phi + \phi'$ with the back of the wall AB.

The triangle ADK will then be equal to the triangle abc. Since we already know that

area ABD = area abc,

it follows that

area ABD = area ADK.

That is, the plane of rupture AD divides the surface ABDK into two equal areas.

The line AH parallel to DK and at angle $\phi + \phi'$ with the back of the wall is called the directrix.


15. The Triangle of Pressure. — From the triangle of forces we have

$$W: Q: P = ab: bc: ac = AK: AD: DK.$$
 (1)

From these proportions we may reduce the following principle:

The weight of the sliding prism, the reaction of the plane of rupture, and the resistance opposed by the back of the wall are proportionals to the three sides of the triangle ADK.

In Fig. 15, with center in A and radius AD, draw an arc

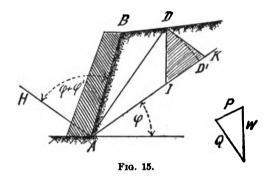

DD', so that AD' = AD; and with center at K mark off KI = DK. Draw DI, and DD'' then will have

$$AK: AD'': KI = \triangle ADK: \triangle ADD'': \triangle DKI,$$

or, which is the same,

$$AK:AD:DK = \triangle ADK: \triangle ADD'': \triangle DKI.$$

From equation (1) we have

$$AK:AD:DK=W:Q:P;$$

substituting these values gives

$$W: Q: P = \triangle ADK: \triangle ADD'': \triangle DKI,$$

38

and as the area of $\triangle ADK = \triangle ABD$ is proportional to the weight W, the triangles ADD'' and DKI will be respectively proportional to Q and P.

The reaction Q of the plane of rupture is equal to the weight of a prism having ADD'' for base; or, denoting by γ the weight of a cubic unit of the soil,

$$Q = \triangle ADD'' \times \gamma.$$

The pressure P is equal to the weight of a prism of unit height having the triangle DKI as its bases, or

$$P = \triangle DKI \times \gamma.$$

The triangle DKI is called the triangle of pressure.

The demonstration last given (Fig. 15) is due to Professor Weyrauch.


APPLICATION OF THE METHOD TO VARIOUS PRACTICAL CASES

- 16. In order to utilize the theory just given in solving practical problems, we will study the graphical construction for determining both the plane of sliding and the triangle of pressure in various embankments:
- 1. When the embankment is surcharged, its upper surface being inclined at any angle.
- 2. When the embankment has no surcharge, its upper surface being horizontal.
- 3. When the surcharge is maximum, its upper surface sloping at the angle of repose of the soil.
- 4. When the upper surface of the embankment is a broken surface, composed of several planes so that its profile forms a broken line.

5. When the upper surface of the embankment is a cylindrical surface, whose profile is a curve.

The angle which the upper surface of the embankment makes with the horizontal will here be called the angle of surcharge.

17. CASE I. Surcharged Embankment; Any Angle of Surcharge. — Let ABC, Fig. 16, be the cross section of the

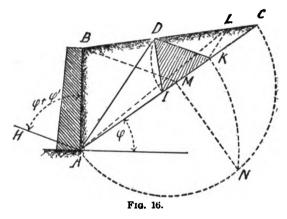

bank of earth limited above by the plane BC, AB being the back of the retaining wall.

Supposing the problem to have been already solved, AD will be the plane limiting the prism causing the pressure. From A draw the directrix AH, making with the back of the wall AB an angle equal to $\phi + \phi'$. From D draw DK parallel to AH; from K draw KL parallel to AD; and from B draw the line BM parallel to AH.

The two triangles ADK and ADL are equivalent because they have the same base and are included between parallels. Also, since $\triangle ABD = \triangle ADK$ (because the plane of rupture divides the area ABDK into two equivalent triangles), the triangles ABD and ADL must be equivalent. Considering

BD and DL as the bases of these triangles, they have the same altitude (a normal from A to BL), and hence their bases must be equal, or BD = DL.

In the similar triangles ADC and CLK,

$$AK: AC = DL: DC = BD: DC.$$

Also, in the similar triangles BMC and DKC,

$$BD:DC=MK:KC.$$

Therefore,

$$AK: AC = MK: KC.$$

The two latter quantities may be written in terms of the former as follows:

$$MK = AK - AM$$
 and $KC = AC - AK$.

which substituted in the previous equation give

$$AK: AC = AK - AM: AC - AK$$

which proportion, multiplied out, gives

$$\overline{AK^2} = AM \times AC.$$


This means that AK is a mean proportional between the segments AM and AC. Therefore by drawing a semicircle on AC as diameter, erecting a perpendicular MN at N, and marking off AK=chord AN, we determine the point K. For the triangle ANC is a right triangle, being inscribed in a semicircle; and in a right triangle either leg is a mean proportional between the adjacent segment of the hypotenuse cut off by a perpendicular from the vertex to the hypotenuse and the whole hypotenuse.

This gives a simple means for locating the plane of rupture. AC being the plane of repose, draw BM parallel to the directrix AH. When drawing the semicircle ANC

locate K as described; draw KD parallel to the directrix AH. Draw AD which is the plane of rupture.

To describe the triangle of pressure: with center at K and radius KD, lay off KI = KD; unite I with D. The triangle KDI will be the triangle of pressure or the triangle whose area multiplied by the unit of weight of the material gives in pounds the total pressure against the retaining wall, per lineal foot of wall.

Point K may also be located as shown in Fig. 17: describe a semicircumference on MC as diameter, and from A

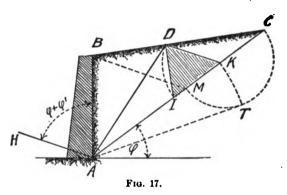

draw the tangent AT. Revolving AT about A into AC gives AK. This method is based on the theorem of geometry that the tangent to a circle is a mean proportional between the whole secant and its internal segment.

Similar methods of construction leading to exactly the same result can be made with the use of other lines as base in place of AC:

- (a) The upper surface of the embankment BC.
- (b) The back of the retaining wall AB.
- (c) The directrix AH.

(a) In Fig. 18 project the points A, M, and C upon BC or BC produced by lines parallel to the directrix, which gives the points H, B, and C. Since the equation of Fig. 16, viz.,

 $A\overline{K}^2 = AM \times AC,$

is true also for any set of projections of these lines, the construction above applied to AC and AM may be applied

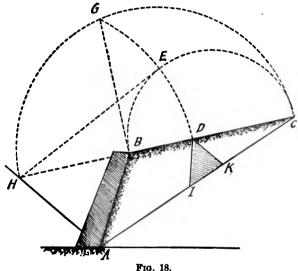


FIG. 18.

directly to HC and HB, giving HD according to the equation,


 $\overline{H}\overline{D}{}^{2}=HB\times HC.$

This gives a point which is the projection of K by a line parallel to AH, and as will be seen by referring to Fig. 15 this is the point D in the plane of rupture. Therefore the construction of Fig. 18 gives point D and defines the plane of rupture directly. The details of the construction are shown in Fig. 18.

Having D, draw DK parallel to AH to intersect the surface of repose AC at K. Then lay off KI = KD. Triangle DKI is the triangle of pressure.

In Fig. 18, for convenience, the value of ϕ has been taken larger than in former cases and the resulting triangle of pressure is smaller.

The construction of Fig. 17 is applicable here also, of course, as shown in Fig. 18. Describe a semicircle on BC as diameter, draw a tangent from H, and revolve HE to HD.

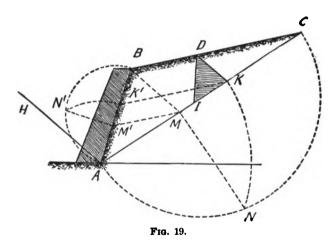


(b) Project the points A, M, and C, Fig. 19, on the back of the wall AB by lines parallel to BC, giving the points A, M', and B. As in the preceding case, the construction for a mean proportional is applied to AB and AM', giving the point K', which projected by a line parallel to BC gives the point K.

The construction is clearly indicated in Fig. 19. Point M is found as before by projecting B upon the surface of repose AC by a line BM parallel to the directrix.

44 EARTH SLOPES, RETAINING WALLS, AND DAMS

(c) Referring to Fig. 20, project the points H, B, and C on the directrix AH by lines parallel to AC, which give points H, B', and A. Then HB' and HA are the segments for which a mean proportional is to be found. By using the construction already fully explained, and shown for this case in Fig. 20, point D' is found, which is projected parallel to AC upon line BC, giving point D in the plane of rupture. From D the triangle of pressure is found as before.

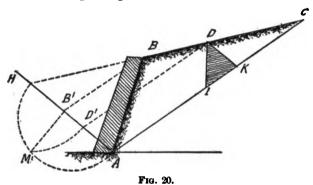

The last two constructions, (b) and (c), are very convenient when the angle of surcharge is large, as that point C falls outside the sheet of paper.

18. Case 2. No Surcharge. — Professor Weyrauch has demonstrated analytically that when the upper surface of the embankment is horizontal, *i.e.* when there is no surcharge and the back of the wall is vertical, the pressure of the earth against the wall is normal to the back of the wall; in other words $\phi' = 0$.

In this case the plane of rupture and the triangle of pressure can be determined very simply as indicated in Fig. 21. The directrix AH now makes the angle ϕ with the back of the wall; then the two triangles AHB and AHC

will be similar because they have the angle at H in common, and the angle HCA = BAH because both are equal to ϕ ; the third angle in each triangle is a right angle.

The triangles being similar,


$$HB: HA = HA: HC,$$

or

$$\overline{HA^2} = HB \times HC.$$

But we know also (from Fig. 17) that

$$\overline{HD}^2 = HB \times HC.$$

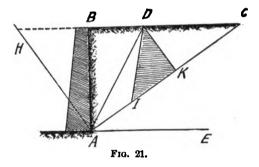

It follows from these two equations that HA = HD and consequently the angles HAD and HDA are equal. Now, since HC and AE are parallel, angle HDA equals angle DAE as they are alternate interior angles; hence we may write the equations:

$$\angle HAD = \angle DAE$$

or,

$$\angle HAB + \angle BAD = \angle DAC + \angle CAE$$
,

or, what is same,

$$\phi + BAD = DAC + \phi,$$


whence, finally,

$$\angle BAD = \angle DAC$$
.

That is to say, the plane of rupture AD bisects the angle between the back of the wall and the natural slope of the earth.

When point D has been found, the procedure for drawing the triangle of pressure is the same as already described. From D draw DK parallel to the directrix AH to intersect the plane of repose at K. From K lay off on KA a segment KI = KD, and draw ID. Then triangle DKI is the triangle of pressure.

19. CASE 3. Embankment with Maximum Surcharge; Angle of Surcharge equal to Angle of Repose. — When the angle of surcharge is equal to the angle of repose, i.e. the top of the embankment is parallel to the natural slope of

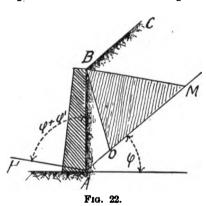

the soil, the lines BC and AM (Fig. 22) are parallel, which means that point C, their intersection, is at infinity. Under these conditions the plane of rupture will coincide with the plane of natural slope AM.


The triangle of pressure DIK, being contained between the two parallels BC and AC, can be constructed

at any point. Draw the directrix AH; from B draw BM parallel to AH; make MO = MB and unite O with B. The triangle BMO is the triangle of pressure.

20. CASE 4. Embankment with Irregular Surcharge (Top of Embankment a Polygonal Profile). — Suppose the earth be limited above by two planes whose traces BG and GC,

Fig. 23, form a broken line. It is necessary to change the broken profile into a straight line by the method of transformation of figures into simpler equivalent ones as given by geometry. This reduces the problem to one of those already discussed (Cases 1 to 3).

In our Fig. 23 produce GC to the left, connect A with G, and from B draw BF parallel to AG. The triangle AGF is equivalent to the triangle ABG and can be taken in its stead. The problem is thus reduced to the problem

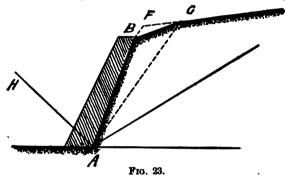


of Case 1, and is solved as follows: from F draw FM parallel to AH, giving point M on the surface of repose AC. With MC as diameter draw a semicircle, lay a tangent to it from A, AT, locate point K on AC by making AK = AT, and from K draw KD parallel to AH, giving point D on the upper surface FC. Lay off the segment KI = KD on AC, and connect I with D, which gives the triangle of pressure KDI.

When the upper line of the embankment, instead of being a broken line as simple as the one just considered, consists of many segments, it still may, in every case, be reduced to an equivalent straight line by the same methods as indicated above. 21. Case 5. Embankment with Irregular Surcharge (Top of Embankment of Curvilinear Profile). — When the embankment is bounded above by a cylindrical surface whose trace in the plane of section is a curve, the problem cannot be solved directly, but may be solved by trial.

According to Professor Rebhann's demonstration the problem can be reduced to a relatively simple one, viz. to find on the curved profile BC a point M such that the following equation be satisfied:

area ABM =area AMK,

the line MK being drawn parallel to H. Along the curve BC, Fig. 24, take a large number of successive points I, II,

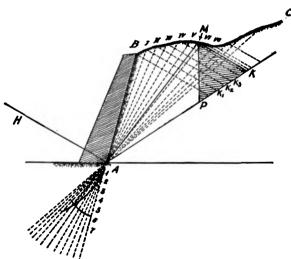

F1G. 24.

III, ... etc., so close together that the sectors ABI, IAII, IIAIII, ... etc., can be considered as triangles and their areas easily calculated. Assume, then, any convenient scale of reduction b for these areas such that on dividing each area by

b we obtain a number and may therefore represent the areas by segments of straight line. On AB, or in our case on AB produced, lay off the segments A, 1; 1, 2; 2, 3, proportional to the areas of the sectors BAI, IAII, IIAIII, etc., so that the line A_8 , for instance, when multiplied by b will represent the area between AB and AIII.

Now with center at A lay off the segment A_1 on the line A_1 produced, A_2 on line A_{11} produced, A_3 on the line A_{111} produced, etc. Draw a curve through the points so found. The radius vector of this curve represents to scale the area of the prism of earth between the wall AB and the radius vector itself.

Also, from A draw the directrix AH making the angle $\phi + \phi'$ with the back of the wall. From each one of the points I, II, III, . . . into which the curvilinear profile has been divided, draw lines $1K_1$, $11K_2$, $111K_3$, etc., parallel to the directrix AH; the triangles $1AK_1$, $11AK_2$, $111AK_3$, etc., are thus obtained. Measure the area of each one of these triangles, reduce these areas on the same scale b, and lay off the resulting values on the corresponding radii Join the points so obtained by a downward from A. smooth curve. Now each radius vector divides the embankment into two parts, a sector and a triangle; for example, the radius AIII gives the sector BAIII and the triangle III AK. These different areas corresponding to each radius are represented by the two curves. Where the curves intersect, it is evident the area of the sector is equal to the area of the triangle. But according to the theory of Professor Rebhann, this is the condition which defines the plane of rupture. Consequently the point M(corresponding to point D of the preceding cases) is found by uniting the point of intersection of the two curves of area with A, and producing it till it strikes the curvilinear profile of the top of the embankment at M.

The triangle of pressure is found as before. From M draw MK parallel to the directrix AH, lay off on the plane of natural slope a segment KP = MK, join M and P, and the resulting triangle MPK is the triangle of pressure. The area of this triangle, multiplied by the weight of a cubic foot of the material, gives the thrust of the earth against the retaining wall, per lineal foot of wall.

Of course this method is slightly inaccurate, since the sectors BAI, IAII, etc., were considered as triangles, that is, the short arcs, BI, III, etc., were taken as straight lines. But by making the segments BI, III, etc., sufficiently short, the error may be reduced to any desired degree.

VARIATION OF PRESSURE WITH HEIGHT OF WALL; INTENSITY OF PRESSURE; CENTER OF PRESSURE

22. In the following section we will investigate the manner of variation of the pressure against a retaining wall.

Suppose the point A, the foot of the wall, is moved upward along AB, i.e. the wall is decreased in height. For the new height of wall, both the plane of sliding and the triangle of pressure will be altered to determine these quantities under the new conditions, the construction previously used is to be repeated. Since all the angles remain the same, and the respective lines remain parallel to their original positions, the resultant figures will be similar. Therefore, also, the base as well as the altitude of the triangle of pressure will be proportional to the height of the wall AB, and in consequence the value of the pressure P must be proportional to the square of the heights of wall.

In Fig. 25, for example, if A' is the middle point of AB, from A' draw A'C' and A'D' parallel to AC and AD respectively; the triangles ABC' and A'B'C'' are similar, also the triangles A'BD' and ABD, having their sides respectively parallel. But in similar triangles the homologous sides are proportionals, and since $A'B = \frac{1}{2}AB$ by construction, the other sides of the triangles are in the same proportion, i.e. $BD' = \frac{1}{2}BD$ and $BC' = \frac{1}{2}BC$. In the similar triangles A'D'C' and ADC, the altitudes D'M' and DM

are in the same proportion as the sides, that is, $D'M' = \frac{1}{2}DM$. Then, the isosceles triangles D'K'I' and DKI, having two sides respectively parallel and the included angle equal, are similar, and since $D'K' = \frac{1}{2}DK$, all the other corresponding

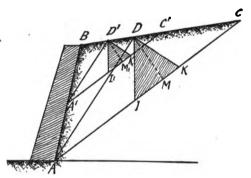


Fig. 25.

sides will be in the same proportion, or $K'I' = \frac{1}{2}KI$. Now, the area of the triangle of pressure K'D'I' corresponding to the height of a wall $A'B = \frac{1}{2}AB$ is given by the formula, area $= \frac{1}{2}D'M' \times K'I'$. Since $D'M' = \frac{1}{2}DM$ and $K'I' = \frac{1}{2}KI$, we have, area $D'K'I' = \frac{1}{2}\frac{DM}{2} \times \frac{KI}{2} = \frac{1}{2}\frac{DM \times KI}{4}$.

In other words, the area of the triangle D'K'I' is one fourth the area of the triangle DKI. But the area of the triangle DKI multiplied by γ , the unit weight of the material, gives the total pressure against the wall AB, while the corresponding pressure for a wall of the height $A'B = \frac{1}{2}AB$ will be one

fourth the area of the same triangle multiplied by γ , or the pressure is one fourth as great. Similarly, for a wall one third the original height, the pressure is one ninth, for a wall of double height the pressure is four times as great, etc. Thus we see that the pressure of earth against a retaining wall is proportional to the square of the height of the wall.

23. Intensity of Pressure. — We may also derive the principle that the intensity of pressure upon any element of the back of the wall (represented by the line AB) is proportional to the distance of the element below the top of the wall.

Let y be the distance of any point on the back of the wall AB below the top B. The total pressure above point y being proportional to the square of the height y can be represented by cy^2 , where c is a constant coefficient. Now, if y is increased by an infinitesimally small quantity dy, the total pressure increases correspondingly by the quantity 2 cydy; making dy = 1, the total pressure increases by the amount 2 cy, which is directly proportional to the height y. Consequently the pressure per unit of height between y and y + dy is given by 2 cy, which is proportional to the height y.

The intensity of pressure at the middle point of the back of the wall is obtained by dividing the total pressure against the wall by the height of the wall. For if half the height of the wall be called y, the total pressure above the middle point is $P = cy^2$, and the intensity of pressure at the middle point, as just found, is $p_1 = 2 cy$, or

$$p_1 = 2 c \frac{AB}{2} = cAB. \tag{1}$$

Also, the total pressure upon the back of the wall for its full height is $P = cy'^2$, but in this case $y^1 = AB$, so that $P = cAB^2$.

The average pressure on AB is obtained by dividing this equation by AB, which gives

$$p = \frac{P}{AB} = cAB.$$

Comparing this with equation (1) we see that p = p', or the intensity of pressure at midheight is exactly equal to the average pressure against the entire wall AB.

The value of the intensity of pressure at the lowest point of the wall, at A, is double the intensity of pressure at the middle point A'. For, as above shown, the intensity of pressure at any point is expressed by the general formula 2 cy. At the point A, therefore, the intensity of pressure is 2 cAB, while at A' (Fig. 25) it is CAB; the former is twice the latter. But also, since the intensity of pressure at midheight equals the mean intensity of pressure on the entire wall, as above shown, we see that the intensity of pressure at the base of the retaining wall is twice the average intensity of pressure against the wall.

The total pressure P is given by the area of the triangle of pressure, DKI, multiplied by the weight of a cubic foot of the material, γ . If we call a the altitude of the triangle, IK being its base, the total pressure P therefore is


$$P = \frac{1}{2} \gamma a \cdot IK.$$

Using this value of P to express the average intensity of pressure p, and the intensity of pressure at the base p', we have, $p = \frac{1}{2} \frac{\gamma a \cdot IK}{AR} \text{ and } p' = \frac{\gamma a \cdot IK}{AR}.$

These values of the intensity of pressure at the middle and the base of the wall can be represented graphically. In Fig. 26, from A draw a line perpendicular to AB and on it lay off

a segment AZ = IK. Along AB lay off another segment AL = a. Connect L with Z; the triangle ALZ is equivalent to the triangle of pressure DKI. Now connect B with Z and from L draw LV parallel to BZ.

The triangles ABZ and ALV are similar, consequently

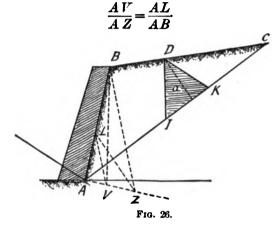

But by construction AL = a and AZ = IK, so that

$$\frac{AV}{IK} = \frac{a}{AB},$$

from which we find that $AV = \frac{a \times IK}{AB}$.

We found above that the intensity of pressure at the base is $p' = \frac{\gamma a \times IK}{AB}$; therefore $p' = \gamma AV$, or in other words the intensity of pressure at the base of the wall AB is given by the segment AV multiplied by γ , the specific weight of the soil.

The intensity of pressure at the middle point of AB is $p = \frac{1}{2} p'$. This will be represented by one half of the segment AV multiplied by the weight of a cubic foot of soil:

$$p = \frac{1}{2} p' = \frac{1}{2} \frac{Va \cdot IK}{AB} = \frac{1}{2} \gamma A V = \gamma \frac{AV}{2}$$

24. Center of Pressure. — In the right triangle ABV the width of the triangle at any point represents the intensity of pressure at that point; that is, ordinates drawn from AB to the line BV represent graphically the different values of p=2 cy. The total pressure upon the back of the wall will be given by the sum of the pressures on the successive unit areas, that is, it is equal to the area of the triangle BVA. It is applied at the center of gravity of the triangle ABV, at $\frac{2}{3}AB$ from the vertex B, and at $\frac{1}{3}AB$ from A. Hence we may say in general:

The point of application of the total pressure on the back of a retaining wall is at one third the height from the base.

The triangles ABV and DKI are equivalents, for $\triangle DKI = \triangle LAZ$ because constructed with equal bases and altitudes.

$$\triangle LAZ = \triangle LAV + \triangle LVZ$$

and as

$$\triangle LVZ = \triangle LVB$$
.

(having equal bases and altitudes, their vertices being on lines parallel), it follows that

$$\triangle LAZ = LAB + LVB = BAV.$$

Hence

$$\wedge DKI = LAZ = BAV$$
.

THE EARTH PRESSURE REPRESENTED BY A LINE

25. The pressure against a retaining wall can be represented by the length of a line drawn to a determined scale.

Let $h\gamma_m$ be the scale of reduction, in which h may be taken as equal to 1, while γ_m is the unit of weight of the material used in the construction of the retaining wall. Also, let

p = the length of the line representing the pressure,

a = the altitude of the triangle of pressure DKI,

 γ = weight of the unit of volume of earth in the embankment. Then we can write

$$p = \frac{P}{h\gamma_m} = \frac{\triangle DKI \times \gamma}{h\gamma_m} = \frac{IK \times a}{2 h \frac{\gamma_m}{\gamma}}.$$

In Fig. 27, α is the angle that DD' makes with AH or its parallel DK; then

$$IK = DK = \frac{a}{\cos a}$$


Substituting this value of IK in the former formula, we get

$$p = \frac{a^2}{2 h \frac{\gamma_m}{\gamma} \cos \alpha}.$$

For simplicity call the denominator $2 h \frac{\gamma_m}{\gamma} \cos \alpha = n$, then

$$p=\frac{a^2}{n}$$

Now the angle $\alpha = \phi' - \delta$, equal to the angle that the direction of pressure makes with the horizontal. This is

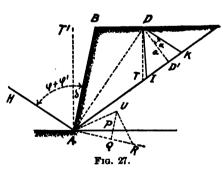

evident if from A and D we draw the vertical lines AT' and DT; for the angles KDT and HAT' are equals; but $HAT' = \phi + \phi' - \delta$ and TDK = TDD' + D'DK since the angle $TDD' = \phi$ (because the sides are re-

spectively perpendicular); hence the angle $D'DK = \alpha$ will be equal to $\phi' - \delta$.

The following graphical construction can now be developed: on the horizontal line, Fig. 27, lay off a segment $AP = 2 h \frac{\gamma_m}{\gamma}$. Then from A draw a line AQ making with AP an angle $\alpha = \phi' - \delta$. From P draw PQ perpendicular to AQ. Then

$$AQ = AP \cos \alpha$$

and substituting the value of AP,

$$AQ = 2 h \frac{\gamma_m}{\gamma} \cos \alpha = n.$$

Along the perpendicular line QP produced lay off a segment QU = DD' = a. Connect U with A and from the point U draw the line UR perpendicular to AU meeting AQ produced at the point R. In the triangle AUR it is easily seen the perpendicular UQ will be the mean proportional between the two segments AQ and QR, that is,

$$\overline{UQ}^2 = AQ \times QR;$$

but UQ = a, and AQ = n, so that

$$QR = \frac{a^2}{n} = p.$$

Thus, with the scale of reduction selected as described, the length of the line QR represents the total pressure against the wall AB.

It is observed that when the value of n increases the pressure P will decrease. Now, n increases with a decrease of $\alpha = \phi' - \delta$. Since ϕ' is a constant, the variation of P will depend exclusively upon the value δ , which represents the inclination of the back of the wall from the vertical. In other words, the pressure will assume different values according to the various inclinations given to the back of the wall.

The pressure is smaller when the wall is inclined toward the slope of the embankment, and the pressure is least when $\phi' = \delta$.

When the inclination of the wall is outward, the angle δ changes sign, so that we will have $\alpha = \phi' + \delta$. The value of n will then decrease with increasing values of δ , and the value of the pressure P will increase greatly.

From these considerations we may deduce that a wall is in better condition to resist the pressure when it is built with its back inclined toward the embankment. In practical work, walls are usually built with the back vertical, so that $\delta = 0$. But walls with a slope of $\frac{1}{8}$ or $\frac{1}{10}$ will be more economical, quite as convenient, and will not be difficult to construct.


EFFECT OF COHESION ON PRESSURE AGAINST RETAINING WALLS

26. Hitherto, the problem of earth pressure against retaining walls has been considered without regard to the cohesive force of the soil or backing material. This was done for several reasons, chiefly because retaining walls are usually built to support filled earth, in which case the backing earth is practically devoid of cohesion. Even in the case of a wall supporting a bank of earth in its natural position, the cohesion is usually neglected, because the value of the cohesion is easily altered by atmospheric influences, while the force of friction remains almost constant in the same embankment. However, the forces of friction do not enter into action until the cohesive power of the material has been entirely destroyed or overcome.

It is a known fact that a bank of earth endowed with cohesion exerts a smaller pressure against a retaining wall

than a similar bank of earth without cohesion. Although for simplicity of calculation and for added safety the cohesive force of the material is always neglected, yet there are cases in which it will be useful to determine how far the cohesion of the earth affects the total pressure against the wall.

Let ABC, Fig. 28, be a bank of earth in which AB is the back of the retaining wall, AC is the plane of natural repose, and AD is the plane of rupture. The triangle DKI is

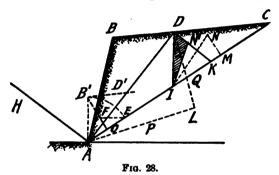

the triangle of pressure determined according to the methods indicated in the preceding sections.

The force of cohesion will prevent the prism of earth ABD, which causes the pressure, from sliding along the plane AD. Since the force of cohesion is uniformly distributed on this plane of sliding and is proportional to the area of the plane, it can be represented by the plane of sliding itself, and in our case will be represented by the line AD. In all these calculations the depth of embankment considered, in a direction perpendicular to the plane of the drawing, is equal to 1.

To determine the value of the cohesive force of the material it is necessary to know first the coefficient of cohesion.

For such a purpose cut a trench and find by experiment the vertical height up to which the material remains in equilibrium without support. Let AB', in Fig. 28, be such a vertical height; then from B' draw B'O perpendicular to the line AC of natural repose. Lay off a segment AE = AB', and from E draw the horizontal line EF. We know that the coefficient of cohesion is

$$K = \frac{1}{4} EF$$
.

The force of cohesion per unit of surface is given by

$$C = K\gamma = \frac{1}{4} \gamma EF$$

and the total force of cohesion acting to prevent the prism which causes the pressures from sliding along AD will be given by

$$C = \frac{1}{4} \gamma EF \times AD$$
.

Now resolve the force of cohesion, represented by the line AD, into its two components Q and P, as was done for the prism ABD, p. 31. The direction of Q was found to be at an angle ϕ with the normal to AD, hence it makes with AD itself an angle $90^{\circ} - \phi$. The direction of the pressure P was found to make an angle ϕ' with the normal to the back of the wall, and consequently makes an angle $90^{\circ} - \phi'$ with the back of the wall. Therefore draw the component Q to make an angle $90^{\circ} - \phi$ with AD and the component P to make an angle $90^{\circ} - \phi'$ with AB.

Let AL and DL be the two components of the force of cohesion represented by AD.

The decrease of the earth pressure as a result of the cohesive force of the material will be represented by the component AL, that is, the pressure is decreased by a quantity

proportional to AL and having the amount

$$C_1 = \frac{1}{A} \gamma EF \times AL,$$

which can be written

$$C_1 = \frac{1}{2} \gamma EF \times \frac{1}{2} AL.$$

Such a quantity can be graphically represented in the triangle of pressure as follows:

Along the line AC from I toward IK lay off a segment $IM = \frac{1}{2}AL$. At M erect a perpendicular to AC and make MN = EF. Connect N with I. Then the triangle IMN represents the decrease in pressure due to the cohesion, because the area of this triangle multiplied by γ will by construction be found equal to C_1 .

Transform the triangle IMN into an equivalent triangle having the base IK common with the triangle of pressure, and the opposite vertex resting upon one of its sides. Let the triangle IKN' be equivalent to IMN. The former pressure represented by the total area of the triangle $DKI \times \gamma$ is reduced through the effect of the cohesion by a quantity

$$C_1 = \triangle IKN'\gamma$$
.

The remaining pressure against the wall, then, is represented by

$$P_1 = \triangle IDN' \times \gamma$$
.

If instead of the total available value of the force of cohesion, only a portion of this force is relied upon, the amount of the pressure decrease will be determined in a similar manner, except that instead of the whole value of the cohesion only $\frac{1}{2}$ or $\frac{1}{3}$ should be taken, depending upon the factor of safety used. Thus, in the case just considered, if it were required to know the decrease of the pressure which would

result by the influence of half the available force of cohesion, the decrease of pressure is changed

from
$$C_1 = \tfrac{1}{4} \, \gamma \, EF \times AL \qquad \qquad \text{to}$$

$$C_{11} = \tfrac{1}{8} \, \gamma EF \times AL.$$

This quantity is represented graphically on the triangle of pressure by laying off from I toward K a segment equal to $\frac{1}{4}AL$, erecting a perpendicular and making MN = EF the resulting triangle, which can be easily converted into another having IK for base, and the vertex along DK represents the decrease of pressure.

When the bank of earth stands in equilibrium on the slope AB for the full height of the retaining wall to be constructed, the force of cohesion entirely counteracts the pressure. This means that the triangle IMN is equal to the triangle of pressure IDK, and consequently that there is no pressure at all on the back of the wall. In this case the wall may be constructed of any thickness whatever, without regard to questions of earth pressure.


THE PRESSURE OF PASSIVE RESISTANCE OF THE EARTH

27. In the whole of the preceding discussion we have considered the pressure of the earth against a retaining wall on the assumption that the wall is stable and immovable, and that the pressure is caused by the tendency of the earth to move out of its original position. But it may happen that the wall exerts a pressure against the backing earth tending to force it back out of its position. In this case the earth exhibits an enormous resistance, far greater than the pressures heretofore considered. This phenomenon is observed occasionally in the abutments of bridges, where the arches

tend to push the abutments outward; if the thrust of the arches is greater than the active outward pressure of the earth, it forces the abutments back and develops the so-called passive pressure of the backing earth.

The conditions of the problem are the same as those already considered, except that they are reversed.

Let a wall AB, Fig. 29, exert a pressure against the backing earth greater than the active outward pressure of

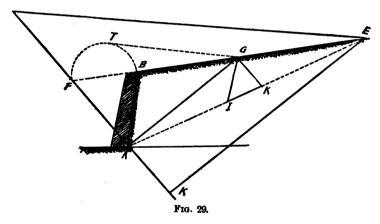


the earth. Then a prism ABE will tend to separate from the mass and slide upward along the plane of rupture. In this case we have the same force as heretofore, but the weight of the prism ABE will now oppose the ascending movement, and the resistances of friction along the surfaces AB and AE will now act downward; consequently the values of ϕ and ϕ' will change sign. In Fig. 29, AB being the back of the wall, ABE is the embankment as limited above by the surface BE, and AF is the trace of the plane of natural slope, passing through A but sloping downward to the right because ϕ is negative.

Draw the directrix AG making with AB an angle equal to $\phi + \phi'$ to the right, since ϕ and ϕ' have changed signs, whereas in the case of active pressure the directrix extended to the left of AB. Produce BE until it intersects the plane of natural repose AF at F; then on BF as diameter describe a semicircle. From G draw the line GT tangent to this semicircle and make GE = GT. Connect E with A; then the line AE will represent the plane of sliding of the prism ABE.

Having located the plane of rupture it is easy to determine the value of the pressure. From E draw the line EK parallel to the direction AG, intersecting the line of natural repose AF at K. From K lay off along KF a segment KM = KE and connect M with E. The triangle KEM will be the triangle of passive pressure or the triangle whose area multiplied by the weight of a cubic foot of the material will give in pounds the value of the resistance of the bank of earth to the inward pressure of the wall.

The intensity of the passive pressure, or the pressure per

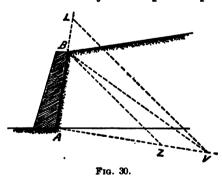

square foot of wall, can be found in the same manner as for the active pressure, as follows:

In Fig. 30, along the line AZ drawn perpendicular to the back of the wall AB, lay off a segment AZ = KM, from A along AB produced

lay off another segment AL = a, the altitude of the triangle KEM. Join B with Z and from L draw LV parallel to BZ. Then

$$AV:AZ=AL:AB,$$

or, substituting for AZ and AL their values,

$$AV: KM = a: AB,$$

that is,

$$AV \times AB = a \times KM$$

from which

$$AV = \frac{a \times KM}{AR}$$
.

Since the intensity of pressure at the base of the wall p is equal to twice the average pressure, or twice the area of the triangle of pressure multiplied by the unit of weight of the material and divided by the total height of the wall AB, we find

$$p = \frac{Va \times KM}{AB} = \gamma A V.$$

Then the intensity of pressure at the middle of the height of the wall, which is equal to the average pressure along AB, is

$$p' = \frac{1}{2}p = \frac{1}{2}\frac{\gamma a \times KM}{AB} = \frac{1}{2}\gamma AV.$$

In the triangle ABV, the ordinates measured perpendicular to AB represent the intensities of pressure at the various points of the wall. It follows that the center of pressure is at the center of gravity of the right triangle ABV, that is, at $\frac{1}{3}$ of AB from A.

In order to compare the active and passive pressures, in Fig. 29, draw the triangle of active pressure GIH in the usual manner. This is found to be much smaller than the triangle representing the passive pressure. The difference increases with increase of the angles ϕ and ϕ' , and decreases

66 EARTH SLOPES, RETAINING WALLS, AND DAMS

with decrease of the same angles; when both these angles are equal to zero, as in the case of liquids, then the active and passive pressures are equal.

The difference in magnitude of the active and passive pressures depends also upon the inclination and direction of the back of the wall AB. Thus, for instance, in walls inclined toward the outside, the difference will be found to be smaller than in walls either vertical or inclined toward the embankment.

In many actual cases the passive pressure of earth has been observed to be 3, 4, 10, even 20 times greater than the active pressure, and under the proper conditions it may be still larger.

CHAPTER III

RETAINING WALLS (continued): ANALYTICAL METHODS

REBHANN'S METHOD

28. Besides the demonstration of the graphical process for calculating earth pressure as given in the preceding chapter, Professor Rebhann has given also an analytical demonstration of his theory in the following manner:

Referring to Fig. 31, let AB be the back or interior face of a retaining wall, BC the limiting surface of the embankment, AD any possible plane of rupture passing through A, and represent by W the weight of the prism ABD. prism ABD in sliding along AD will exert a pressure against the face AB of the retaining wall and against the plane of sliding AD. Calling P and Q the reactions of these two planes, for equilibrium the three forces W, P, and Q, must meet in a point. Therefore, resolve the forces W, P, and Q into their components parallel and perpendicular to AD respectively. Then for equilibrium we must have: (1) the algebraic sum of the components parallel to AD, as well as the sum of those perpendicular to AD, must be equal to zero; and (2) the algebraic sum of the moments of the forces with respect to any point must be equal to zero. That is.

$$R_8 - R_2 - R = 0, (1)$$

$$N_3 + N_2 - N = 0, (2)$$

$$Ww + Pp - Qq = 0, (3)$$

where w, p, and q are the distances from A of the forces W, P, and Q respectively.

From (1) and (2) we have

$$R_3 - R_2 = R, (4)$$

$$N_3 + N_2 = N, (5)$$

but

$$R = N \tan \phi = (N_3 + N_2) \tan \phi, \qquad (6)$$


so that

$$R_8 - R_2 = (N_3 + N_2) \tan \phi.$$
 (7)

Evidently the one sliding plane, or in other words the actual plane of rupture, will be that for which the fraction

$$\frac{R_3-R_2}{N_3+N_2}$$

has the greatest value. If we denote by α the angle DWB' between the plane AD and the vertical passing through W,

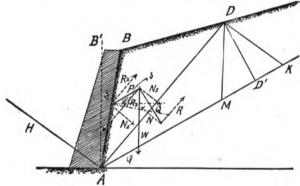

F1g. 31.

we can represent R_3 , R_2 , N_3 , and N_2 in terms of α ; and if we then differentiate the above fraction in respect to α , and put the differential equal to zero,

$$\frac{d}{d\alpha} \left\{ \frac{R_3 - R_2}{N_3 + N_2} \right\} = 0, \tag{8}$$

we will obtain the condition giving the maximum value of the fraction, and therefore the condition which finds the plane of rupture.

To do this, we write

$$R_8 = W \cos \alpha,$$

$$R_2 = P \sin (\alpha + \phi' - \delta),$$

$$N_8 = W \sin \alpha,$$

$$N_2 = P \cos (\alpha + \phi' - \delta).$$

Substituting these values in (7),

$$W\cos\alpha - P\sin(\alpha + \phi' - \delta)$$
$$= [W\sin\alpha + P\cos(\alpha + \phi' - \delta)]\tan\phi,$$

from which we deduce

$$P = \frac{W \cos \alpha - W \sin \alpha \tan \phi}{\sin (\alpha + \phi' - \delta) + \cos (\alpha + \phi' - \delta) \tan \phi}$$
$$= W \frac{\cos (\phi + \alpha)}{\sin (\alpha + \phi' + \phi - \delta)}, \tag{9}$$

or

$$\frac{P}{W} = \frac{\cos(\phi + \alpha)}{\sin(\alpha + \phi + \phi' - \delta)},$$
 (10)

and

$$\frac{W}{P} = \frac{\sin(\alpha + \phi + \phi' - \delta)}{\cos(\phi + \alpha)}.$$
 (11)

Substituting in (8) the values of R_3 , R_2 , N_3 , N_2 , we have

$$\frac{d}{d\alpha} \left[\frac{W \cos \alpha - P \sin (\alpha + \phi' - \delta)}{W \sin \alpha - P \cos (\alpha + \phi' - \delta)} \right] = 0.$$

Differentiating,

$$\left[\frac{dW}{d\alpha}\cos\alpha - W\sin\alpha - P\cos(\alpha + \phi' - \delta)\right]$$

$$\times \left[W\sin\alpha + P\cos(\alpha + \phi' - \delta)\right]$$

70 EARTH SLOPES, RETAINING WALLS, AND DAMS

$$-\left[W\cos\alpha - P\sin\left(\alpha + \phi' - \delta\right)\right] \times \left[\frac{dW}{d\alpha}\sin\alpha + W\cos\alpha - P\sin\left(\alpha + \phi' - \delta\right)\right] = 0,$$

which can be written

$$[W \sin \alpha \cos \alpha + P \cos (\alpha + \phi' - \delta) \cos \alpha - W \cos \alpha \sin \alpha + P \sin (\alpha + \phi' - \delta) \times \sin \alpha] \frac{dW}{d\alpha} - W \sin \alpha + P \cos (\alpha + \phi' - \delta)^2 - P \sin (\alpha + \phi' - \delta)^2 = 0.$$

This can be reduced as follows:

$$P\cos(\phi' - \delta)\frac{dW}{da} - W^2 + 2WP\sin(\phi' - \delta) - P^2 = 0.$$

Dividing by WP and changing signs,

$$\frac{W}{P} - 2\sin(\phi' - \delta) + \frac{P}{W} - \frac{\cos(\phi' - \delta)d}{d\alpha} = 0. \quad (13)$$

But
$$dW = \frac{1}{2} \overline{AD^2} d\alpha \gamma$$
 or $\frac{dW}{d\alpha} = \frac{1}{2} \overline{AD^2} \gamma$

which, substituted in (13), gives

$$\frac{W}{P} - 2 \sin (\phi' - \delta) + \frac{P}{W} - \frac{\cos (\phi' - \delta)}{2W} \cdot \overline{AD}^2 \gamma = 0.$$

Now substituting for $\frac{W}{P}$ and $\frac{P}{W}$ their values as found in (10) and (11), we will have

$$\frac{\sin (\alpha + \phi + \phi' - \delta)}{\cos (\phi + \alpha)} - 2 \sin (\phi' - \delta) + \frac{\cos (\phi + \alpha)}{\sin (\alpha + \phi + \phi' - \delta)}$$
$$-\frac{\cos (\phi' - \delta)}{2A} \cdot \overline{AD^2} \gamma = 0,$$

or

$$\frac{\sin (\phi + \alpha) \cos (\phi' - \delta) + \cos (\phi + \alpha)}{\cos (\phi + \alpha)} \frac{\sin (\phi' - \delta)}{\cos (\phi + \alpha)}$$

$$-\frac{2\sin(\phi'-\delta)\cos(\phi+\alpha)}{\cos(\phi+\alpha)} + \frac{\cos(\phi+\alpha)}{\sin(\phi+\alpha+\phi'-\delta)}$$
$$-\frac{\cos(\phi'-\delta)}{2W} \cdot \overline{AD}^2 \gamma = 0,$$

which reduces to

$$\frac{\sin (\phi + \alpha + \phi' - \delta)}{\cos (\phi + \alpha)} + \frac{\cos (\phi + \alpha)}{\sin (\phi + \alpha + \phi' - \delta)}$$
$$-\frac{\cos (\phi' - \delta)}{2W} \cdot \overline{AD}^2 \gamma = 0.$$

This can also be written as follows:

$$\frac{\sin (\phi + \alpha - \phi' + \delta) \sin (\phi + \alpha + \phi' - \delta) + \cos^2 (\phi + \alpha)}{\cos (\phi + \alpha) \sin (\phi + \alpha + \phi' - \delta)}$$

$$= \cos (\phi' - \delta) \frac{\overline{AD^2} \gamma}{2W},$$

or

$$\frac{\sin^{2}(\phi + \alpha)\cos^{2}(\phi' - \delta) - \cos^{2}(\phi + \alpha)\sin^{2}(\phi' - \delta) + \cos^{2}(\phi + \alpha)}{\cos(\phi + \alpha)\sin(\phi + \alpha + \phi' - \delta)}$$

$$= \cos(\phi' - \delta)\frac{\overline{AD^{2}\gamma}}{\sqrt{W}},$$

which may be reduced to

$$\frac{\cos^2(\phi'-\delta)}{\cos(\phi+\alpha)\sin(\phi+\alpha+\phi'-\delta)} = \frac{\cos(\phi'-\delta)\overline{A}\overline{D}^2\gamma}{2W},$$

and from this the value of W is easily deduced as:

$$W = \frac{\cos(\phi + \alpha)\sin(\phi + \alpha + \phi' - \delta)}{\cos^2(\phi' - \delta)} \cdot \frac{\overline{AD^2\gamma}}{2}.$$
 (14)

Substituting this value in (9) the value of P, the pressure is found to be

$$P = \frac{\cos^2(\phi + a)}{\cos(\phi' - \delta)} \times \frac{\overline{AD^2\gamma}}{2}.$$

The forces P, W, and Q being in equilibrium, the sum of their horizontal components must be equal to zero, that is,

$$P\cos(\phi'-\delta)=Q\cos(\phi+\alpha),$$

or

$$Q = P \frac{\cos(\phi' - \delta)}{\cos(\phi + \alpha)} = \cos(\phi + \alpha) \frac{\overline{AD^2}\gamma}{2}.$$
 (15)

In the triangle ADK, Fig. 31, from D draw DD' perpendicular to AK and DM vertically. Then the angle ADD' will be equal to $(\phi + \alpha)$; for angle ADM = B'AD, their sides being respectively perpendicular, and D'DM is equal to ϕ for the same reason, so that

$$D'DM = ADM + MDD' = \alpha + \phi.$$

Further, DM is parallel to AB', while DK is parallel to AH; therefore $MDK = HAB_1$. But $HAB_1 = \phi + \phi' - \delta$; therefore angle $MDK = \phi + \phi' - \delta$. Since $MDK = MDD' + D'DK = \phi + D'DK$, it follows that $D'DK = \phi - \delta$.

Now in the triangle AKD we have

1

$$DD' = AD\cos(\phi + \alpha) \tag{16}$$

and

$$AK = \frac{\sin(\phi + \alpha + \phi' - \delta)}{\cos(\phi' - \delta)}AD. \tag{17}$$

Consequently,

$$\Delta ADK \cdot \gamma = \frac{\cos(\phi + \alpha)\sin(\phi + \alpha + \phi' - \delta)}{\cos(\phi' - \delta)} \times \frac{\overline{AD^2}\gamma}{2} = W = \Delta ABD\gamma, \tag{18}$$

which means that

The plane of rupture AD divides the surface ABDK into two equivalent parts.

Draw AF perpendicular to DK; then

$$AF = AD \sin (\phi + \alpha + \phi' - \delta). \tag{19}$$

Dividing equation (16) by equation (19) we get

$$\frac{DD'}{AF} = \frac{\cos(\phi + \alpha)}{\sin(\phi + \alpha + \phi' - \delta)} = \frac{P}{W}.$$

Since by construction DK = KM,

$$\frac{\triangle KDM}{\triangle KDA} = \frac{DD'}{AF} = \frac{\cos(\phi + \alpha)}{\sin(\phi + \alpha + \phi' - \delta)} = \frac{P}{W};$$

but equation (18) shows that $\triangle KDA\gamma = W$. Therefore $KDM\gamma = P$, or, in other words:

The pressure of the earth against a retaining wall is equal to the weight of a prism having the triangle *KDI* as a base, or

$$P = \frac{1}{2} \gamma KM \times DD'.$$

Finally, $\triangle ADD'' = \frac{1}{2} AD'' \cdot DD'$,

and since by construction AD'' = AD, while from equation (16) $DD' = AD \cos (\phi + a)$, we have

$$\triangle ADD'' = \frac{1}{2} \overline{AD}^2 \cos (\phi + \alpha),$$

which is the value obtained for Q in equation (15).

Therefore

$$Q = \triangle ADD''\gamma$$

in other words, the reaction Q of the plane of rupture is equal to the weight of a prism of earth having the triangle ADD'' as base.

It will be apparent from the three equations $W = \gamma \cdot ABD$ = $\gamma \cdot ADK$, $P = \gamma \cdot MDK$, and $Q = \gamma \cdot ADD''$, that

$$W: P: Q = AK: DK: AD.$$

We can therefore express the relations between these quantities by saying:

74 EARTH SLOPES, RETAINING WALLS, AND DAMS

The weight of the sliding prism, the reaction of the retaining wall, and the reaction of the plane of rupture are in the same proportion as the sides of the triangle AKD.

FORMULAS OF RANKINE AND WEYRAUCH

29. Various authors have given different theories of earth pressure against retaining walls, based upon entirely different principles. Some authorities even discard all theories on the ground that they involve many assumptions and therefore cannot give reliable results. It is true that there has not yet been devised a method that will give in absolute and unexceptionable manner the value of the pressure against a retaining wall; but since the various approved methods lead to almost the same result, any one of them is capable of giving a result within certain limits satisfactory. In any actual case the engineer may, by comparing the assumptions made in the course of the calculation with the particular conditions of the bank of earth under consideration, secure a fair judgment of the pressure that the wall to be designed has to resist, and will be enabled at the same time to select a suitable factor of safety for the design.

After the pressure of the earth has been determined graphically according to the theory of Professor Rebhann as given in the preceding chapters, it will be instructive to calculate the pressure by another method and compare the results.

Professors Rankine and Weyrauch have studied the problem of earth pressure by analytical methods. Their theories require a long and complicated discussion, and for lack of space they are therefore not given here. The resulting formulas only are given.

Rankine's Formulas. — Professor Rankine assumes that the inclination of the pressure is always parallel to the upper line of the profile of the embankment, or, in other words, that it is parallel to the surcharge, and he considers the back of the wall vertical. If we denote by

W, weight of the earth per cubic foot, h, height of the embankment in feet, a, the angle of surcharge,

and ϕ , the angle of repose of the earth, he gives, for the general case,

$$P = \frac{Wh^2}{2} \times \cos \alpha \frac{\cos \alpha - \sqrt{\cos^2 \alpha - \cos^2 \phi}}{\cos \alpha - \sqrt{\cos^2 \alpha - \cos^2 \phi}}.$$

For level-top embankments, i.e. where $\alpha = 0$, this reduces to

$$P = \frac{Wh^2}{2} \times \frac{1 - \sin \phi}{1 + \sin \phi}.$$

For surface sloping at the angle of repose, i.e. when $\alpha = \phi$, it becomes

$$P = \frac{Wh^2}{2}\cos\phi.$$

Weyrauch's Formulas. — Professor Weyrauch has dealt with all possible cases of retaining walls, not only those of different surcharges, but also those of the inclined wall, the wall leaning either forward or backward. Using, in general, the same symbols as heretofore, *i.e.*

P = total pressure of the earth against the wall.

 ϕ = angle of repose of the material.

 ϕ' = angle of direction of pressure with the normal to the back of the wall.

 α = angle of the surcharge with the horizontal.

 δ = angle of the back of the wall with the vertical taken either positive or negative, according as the slope of the wall will fall either to the left or right of the vertical.

h = height of the wall.

w = weight of earth per unit of volume.

 β = angle between plane of rupture and the vertical,

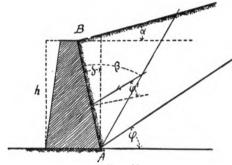


Fig. 32.

and, referring to Fig. 32, he gives

General Formulas.— Embankment with any surcharge.

Wall leaning forward, i.e. away from the embankment,

$$P = \left(\frac{\cos(\phi - \delta)}{(1+n)\cos\delta}\right)^2 \times \frac{wh}{2\cos(\phi' - \delta)},$$

in which

$$n = \sqrt{\frac{\sin (\phi + \phi') \sin (\phi - \alpha)}{\cos (\phi' + \delta) \cos (\delta - \alpha)}},$$

and the value of ϕ' is deduced from the equation

$$\tan \phi' = \frac{\sin (2 \delta - \alpha) - A \sin 2(\delta - \alpha)}{A - \cos (2 \delta - \alpha) + A \cos 2(\delta - \alpha)},$$

in which the value of A is given by

$$A = \frac{\cos \alpha - \sqrt{\cos^2 \alpha - \cos^2 \phi}}{\cos^2 \phi}$$

Back of the wall vertical, $\delta = 0$,

$$P = \left(\frac{\cos \phi}{1+n}\right)^2 \times \frac{wh^2}{2\cos \phi'}.$$

Back of the wall inclined toward the embankment, δ negative,

$$P = \left(\frac{\cos(\phi + \delta)}{(1+n)\cos - \delta}\right)^2 \times \frac{wh^2}{2\cos(\phi' + \delta)},$$

the values of n, ϕ' , and A being deduced from the formulas given above, except that δ is negative.

Embankment with no surcharge, i.e. $\alpha = 0$,

$$P = \frac{\tan \delta}{\sin (\delta + \phi')} \times \frac{wh^2}{2},$$

in which the value of ϕ' is given by

$$\tan \phi' = \frac{\sin \phi \sin 2 \delta}{1 - \sin \phi \cos 2 \delta}.$$

When the back of the wall is vertical, $\delta = 0$, and therefore by the formula last given, ϕ' will also equal zero and the value of the pressure reduces to

$$P = \tan^2\left(45 - \frac{\phi}{2}\right) \frac{wh^2}{2}.$$

If the wall is required to retain water instead of earth, so that ϕ is equal to zero, then the above formula reduces to

$$P=\frac{wh^2}{2},$$

which is the well-known formula for the pressure of water against a dam.

The pressure cannot be calculated when the wall is inclined inward.

Embankment with surcharge parallel to the natural slope; $\alpha = \phi$.

$$P = \left(\frac{\cos(\phi - \delta)}{\cos \delta}\right)^2 \times \frac{wh^2}{2\cos(\phi' + \delta)},$$

78

in which ϕ' is obtained from

$$\tan \phi' = \frac{\sin \phi \cos (\phi - 2 \delta)}{1 - \sin \phi \sin (\phi - 2 \delta)}$$

When the back of the wall is vertical, $\delta = 0$, and then $\phi = \phi'$, the value of the pressure is simplified to the form,

$$P = \frac{1}{2}\cos\phi \ wh^2.$$

When the back of the wall is inclined inward toward the embankment, the value of δ becomes negative and the general formula will be

$$P = \left(\frac{\cos{(\phi + \delta)}}{\cos{-\delta}}\right)^2 \times \frac{wh^2}{2\cos{(\phi' - \delta)}},$$

the value of ϕ' being deduced from

$$\tan \phi' = \frac{\sin \phi \cos (\phi + 2 \delta)}{1 - \sin \phi \sin (\phi + 2 \delta)}.$$

30. The different values of the earth pressure determined by graphical computation according to the theory of Professor Rebhann are very close to those obtained from the formulas of Rankine and Weyrauch. This may be seen from the following tables prepared from the class work by Mr. W. J. Miller.

In the following tables are given in pounds the value of the earth pressure against walls of different heights. The walls were considered to be vertical, leaning 5° forward and inclined 5° toward the embankment. In the first table the bank of earth was considered with no surcharge, or when $\alpha = 0$; in the second table when the surcharge made with the horizontal an angle of 10°, or $\alpha = 10^\circ$. Finally, in the last table, the surcharge was considered parallel to the line of natural slope of the material, or when $\alpha = \phi$. In every case the weight of the earth was assumed to be 96 lb. per cubic foot, and the angle of natural slope $\phi = 30^\circ$.

FABLE 1

	VERTIC	VERTICAL METHOD, OR \$= 0°	9 = 0	WALL INCLINED OR \$=5°	WALL INCLINED OUTWARD, OR \$= 5°	WALL INCLINED INWARD, OR \$=-5°
HEIGHT OF WALL	GRAPHICAL METHOD	ANALYTICAL METHOD	Митвор	Rebbenn	Wavrench	W. W
Ft.	Rebhann	Weyrauch	Rankine			
25	9747	0666	10000	12420	12392	8748
8	14035	14400	14400	15552.08	15148	11282.88
35	19392	19533.56	19600	21168	1	17053
40	24953	25497.6	25674.4	27648	I	22394.8
45	31570.2	ı	1	35992	1	28441
20	38988	ı	i	43200	ı	35992
55	49152	48399.5	48400	53868	50050.5	47990
09	56142	60048.6	60276.5	62238	61834	50388.4
65	62899	ı	67606	73008	ı	28968
20	76416.4	78306.9	78400	84672	81089.9	72610.56
75	87723	ı	ı	97200	ı	78732
8	60866	ı	1	110592	1	93726
	112675	114332	114576	124848	122987	101126.88

CABLE II

	VERT	VERTICAL WALL, OR 8= 0°	90 - 8	WALL INCLIN	WALL INCLINED OUTWARD, OR 8= 5°	WALL INCLINED OR 8= - 5	WALL INCLINED INWARD, OR 8 = - &
HRIGHT OF	Веариноа М ети.	ANALTTIO.	ANALTTICAL METHOD				
F.	Rebhann	Weyrauch	Rankine	Keonann	w eyraueb	Kebban	Weyrauch
25	9948	10370	10490	12309.5	12150	9117.12	9004
80	14470.8	14320.6	15094.8	18338	18527.5	12558	11648.6
35	20260.8	20168.4	20768	23461.8	22684	17472	18546.2
40	25712	26343	27287	29506	28287	23325	23804.8
45	33916	ı	1	39512	l	29328	1
20	40176	I	l	47880	1	34884	1
55	49960	50304	51935.6	56544	54630	42408	43508
09	59197.4	59027.6	58947	66842.9	67834	50592	48915
65	67897.7	67606.4	68884.4	89310.2	86966	61036.8	1
20	80828.6	80661	82459.3	93225.6	92052.8	68372.7	1
75	90396	I	1	107730	1	78489	1
8	107623	I	l	122572	ı	89303	l
85	121169.9	120866	120205	138954.8	138402.9	105327.4	105202

TABLE II

	VER	VERTICAL WALL, OR 8=0	0=9 2	WALL INCLIN.	WALL INCLINED OUTWARD, OR 8=5°	WALL INCLIN	WALL INCLINED INWARD, OR &= -&
HRIGHT OF WALL	Сварнісац Метнор	ANALYTICA	ANALYTICAL METHOD	Rebhann	Weyrauch	Rebbann	Weyrauch
£	Rebhann	Weyrauch	Kankine		•		•
25	26700	25942.5	25980	30290.8	31020	22140	23008.24
30	37315.2	37285.75	37368	43636.32	43632.2	31999.6	32111.33
35	50568.9	50922.58	50922.56	59904	00609	43394	43038
\$	60048	66508.8	66508.8	77575.8	77731	47078.4	49788
45	83592	84175	84175	98277	ı	71733.6	1
යි	103200	103923.6	103923.6	121212	1	88560	1
55	124872	124389.2	125747.55	139200	138989	115055.2	116466.2
8	148761.6	149649.9	149644.8	174535	174570.88	127488	128835
65	174408	175668	175668	204848	ı	148666.4	1
20	203616	203690.25	203690.25	237575.5	236320.6	174128.6	174731
75	232200	I	233828	272270	ı	199250.8	l
8	264192	1	266044	252160.8	ı	226718.6	ı
38	298248	300339.2	300339.2	354394	854340	255938	257591

CHAPTER IV


THE DESIGN OF RETAINING WALLS

- 31. Types of Retaining Walls. Retaining walls are built of a variety of sections. For convenience these may be grouped as follows:
 - I. Plain retaining walls.
 - II. Retaining walls with counterforts.
 - III. Retaining walls with buttresses.

Each group can be further subdivided into many varieties according to the inclination and shapes of the front and back of the wall.


- 32. Plain Retaining Walls. The plain retaining wall may be constructed in various manners:
 - (a) With vertical front and back, as indicated in Fig. 33.
- (b) With vertical front and inclined back, as indicated in Fig. 84.
 - (c) With vertical back and inclined front, Fig. 35.
- (d) With both front and back inclined, but in opposite directions, as indicated in Fig. 36.
- (e) With front and back inclined in the same direction, Fig. 37.
- (f) With stepped back. In order to make the wall thicker toward the bottom, the back of the wall may be stepped while the front is plain, either vertical (Fig. 38) or inclined (Fig. 39). The back of the wall in the successive steps may be either vertical or inclined.

(g) With curved face. English engineers often make the back of the wall vertical, whether stepped or not, while the front of the wall is curved to a circular arc of radius gener-

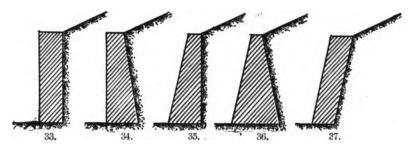

ally equal to twice the height of the wall, the center of the arc being located on the line of the top of the wall produced. Such a section is shown in Fig. 40.

- (h) With curvilinear back and front. German engineers often make the front of the retaining wall circular, following the English manner, but at the same time make the back of the wall, which is usually of stepped construction, also circular and parallel to the front, as indicated in Fig. 41.
 - (i) French engineers have adopted a profile composed of

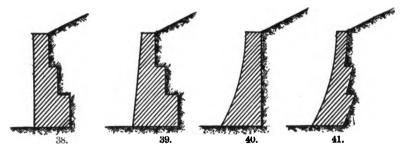

rectilinear segments arranged with different inclinations so that the wall approximates a curvilinear outline. Beginning at the top of the wall, for the first 3 yards they make the inclination of $\frac{1}{6}$, for the second 3 yards, $\frac{1}{4}$, and for the residual height, no matter how high the wall, the constant

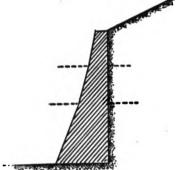


Fig. 42.


inclination of $\frac{3}{10}$ of the height. The back of the wall is formed with steps about 1 ft. wide for every 5 ft. in height. The French profile is shown in Fig. 42.

33. Retaining Walls with Counterforts. — Retaining walls with counterforts are similar to plain retaining walls as described above, but along the

back of the wall, at intervals, are constructed blocks of masonry of larger dimensions reënforcing the wall proper.

These blocks of masonry may be constructed on either rectangular or trapezoidal ground plan, as indicated in Figs. 42 and 43, and they may be vertical or inclined in profile. They may even have a stepped outline. Such counterforts are located usually from 12 to 20 ft. apart, center to center.


34. Retaining Walls with Buttresses. — Retaining walls with buttresses (Figs. 45 and 46) are very similar to those with coun-

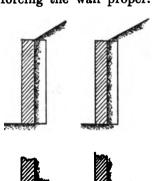



terforts, the only difference being that the pillars or projecting blocks of masonry are on the front of the wall instead of on the back. The buttresses may be rectangular

Fig. 43.

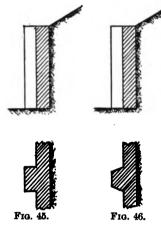


or trapezoidal in plan, and either vertical or inclined in profile, according to the shape of the front of the wall, but they are never recessed. Buttresses are spaced about the same as counterforts, viz., from 12 to 20 ft., center to center.

In very heavy soils to relieve the pressure of the earth against the retaining wall, horizontal arches sprung between the counterforts may be used.

In such cases the counterforts must be designed strong


enough to resist the pressure which is transmitted to them by the arches. The arches may be built in one row or in several rows, and the lowest may sometimes be inverted, as in Fig. 47.

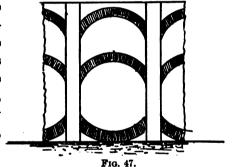

THE EQUILIBRIUM OF RETAINING WALLS

35. The forces acting on a retaining wall are the pressure of the earth P and the weight of the wall W. It has been demonstrated that the point of application of the earth pressure is at a distance above the base of one third the height of the wall. The weight of the wall is assumed to be concentrated at its center of gravity.

The pressure P (Fig. 48) being inclined, making an angle ϕ' with the normal to the back of the wall, may be resolved into its vertical and horizontal components. The

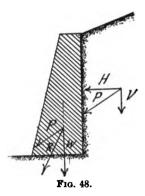

horizontal component thrusts against the wall, tending to produce both sliding and rotation; the vertical component, on the other hand, assists the weight W in pressing down the different strata of the wall and thereby counteracting the overturning and sliding tendency of the horizontal thrust. Under the action of these forces the wall tends to overturn in whole or in part. The

most dangerous section is usually the section at the base of the walls, since the earth pressure increases as the square of the height and therefore increases faster than the resisting forces, the weight of the wall. The tendency of the resultant R of the forces P and W to approach the exterior of the wall is greatest at the base. For this reason the stability of the wall is always determined with respect to the section at the base, and the thickness of any wall to resist a given pressure is always calculated for the base of the wall.

As a rule, a retaining wall is in less danger of failure by sliding than failure by overturning; consequently when a wall is safe against overturning it is generally safe against sliding.

In determining the thickness of retaining walls it is generally assumed that the wall is laid up dry, *i.e.* without mortar, resisting only by virtue of its own weight, and having no tensile strength. Tensile forces are produced in

a wall when the pressure is so near one edge of the wall and is so great that it tends to force down the material at this edge and raise up or tear apart the material at the other edge.

In order that a wall may be strong enough to resist the action of the forces P and W in all the probable sections of rupture, the following conditions must be satisfied:

- 1. The resultant R of the forces P and W must fall within the middle third of the width of the base. This condition, while it makes the wall safe against overturning, also makes tensile stresses impossible.
- 2. The direction of the resultant R must make a smaller angle with the normal to the section than the angle of friction of the masonry of the wall. This condition insures stability against failure by outward sliding.
- 3. The greatest compressive stress must be smaller than the crushing strength of the material composing the wall. This condition insures stability against crushing.

The stability of a retaining wall may be calculated in two different ways: either fixing the condition of equilibrium of the wall and adding a factor of safety, or requiring as a condition of safety that the resultant R shall pass through the middle third of the base.

For calculations according to the first method, let m = the lever arm of P, then Pm will be the product of P by its distance from the foot of the wall A, w = the lever arm of W, and Ww the product of W by its distance from A.

The wall will be in equilibrium when

$$Pm = Ww$$
.

The wall is safe if it is able to resist greater pressure than P. It is usual for this purpose to multiply the moment of



P by a factor of safety, which is generally fixed somewhere between 1.50 and 2.

Such a method, although giving good results, especially when a factor of safety of 2 is used, does not convey any idea of the distribution of stresses in the masonry. Thus, for example, a wall may be safe against overturning, being made to fulfill the condition Pm = Ww with a factor of safety of 2 and yet it may crack and be ruined because the compressive stresses in the wall are concentrated on a small portion instead of being evenly distributed, and because tensile stresses are thus set up.

The second method is the more rational one; and when the engineer has given such proportions to the wall that the compressive stress remains below the crushing strength of the material, he may depend upon the stability of his wall.


DETERMINATION OF WIDTH OF BASE BY GRAPHICAL METHODS

36. In the previous chapters, in calculating the pressure of the earth against a retaining wall, it has uniformly been assumed that the length of wall considered was one unit, consequently that the wedge which tends to slide down and thus causes the thrust against the back of the wall had a length of one unit. For this reason we have always used the area of the triangle of the base as equivalent to the volume of the wedge itself. Continuing this practice, we will deal with a retaining wall having a length of one unit, perpendicular to the plane of the cross-section (the plane of the paper). Then all calculations can be referred to the profile of the wall, since the area of the profile is numerically equal to the volume of a wall one unit long.

From what has gone before, the pressure of the earth against the back of the wall is fully known as to direction, magnitude, and position. When the weights of both the

earth and the masonry per unit of volume are known, it becomes very simple matter to oppose to the prism of earth causing the pressure a suitable resisting section of masonry.

Let ABC (Fig. 49) represent the cross-section of the active prism of earth, and denote by γ_m and γ_t the weight of a unit of volume of masonry and earth respectively. Then for equal weight we

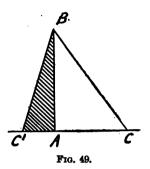

$$AC'\gamma_m = AC\gamma_t$$

from which

will have.

$$AC'' = \frac{AC\gamma'}{\gamma_m},$$


then ABC' will represent a mass of masonry of weight equal to the pressure of the earth.

A retaining wall will be in equilibrium when the moment of the weight is equal to the moment of the pressure. design a safe wall it is necessary to multiply the moment of pressure by a certain coefficient m, called factor of safety; then we will have

$$Ww = Ppm,$$

the coefficient m is usually made equal to 1.5, 2, or even 3.

37. EXAMPLE 1. Retaining Wall with Vertical Front and Back. — Let AB (Fig. 50) represent the back of the wall. From A and B draw the lines AX, BX' horizontally; the thickness of the wall is supposed to have been fixed by successive trials. Along the line AX lay off a segment A1 equal to the unit of length, though it can be taken of any length, and erect a perpendicular, giving the first part of cross-section of the wall. Draw the force polygon, making the ray oO equal twice the earth pressure, or oO = 2P and parallel to the direction of the pressure itself, *i.e.* making an angle ϕ' with the normal to the back of the wall. In the present case, we will assume, it is proposed to build a wall

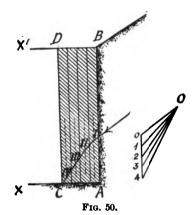

capable of resisting twice the pressure of the earth, that is, a wall having a factor of safety of 2. For this reason we made oO=2P. From o draw a vertical line and lay off a segment o1 equal to the weight of the first part of the wall. Join 1 with O; this will be the resultant of the total pressure combined with the weight of this part

of the wall. Then at one third of AB draw the line of the earth pressure, produce it until it strikes at I the center line of this section of the wall, and draw from I a line parallel to the resultant 10.

Again, along AX take a second segment, and erect a perpendicular. Find the center of this second section of wall and produce the first resultant until it meets this center line at II. In the force polygon lay off a segment 1-2 equal to the weight of this second prism of wall. Draw the resultant O2, and from II draw a parallel to this resultant. Proceed in the same manner by adding continu-

ously small sections of wall, until a point is reached where the last resultant strikes the base line AX at C. Erect the perpendicular CD, the wall ABCD will be the required wall,

being in equilibrium under twice the actual earth pressure.

38. EXAMPLE 2. Retaining Wall with Vertical Front and Inclined Back. — Let AB be the back of the wall (Fig. 51). Draw the horizontals AX and BX'. From the point B drop the perpendicular BB' and divide the undetermined rectangular portion


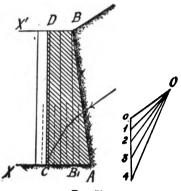


Fig. 51.

to the left of BB' into a number of small vertical stripes as above. Draw the force polygon to such a scale that the segment of will represent the weight of the triangular prism BB'A and the segments 1.2, 2.3, 3.4, etc., the corresponding weights of the successive rectangular prisms of masonry. The construction will be perfectly similar to the one given in the case above except that the earth-pressure line is continued to the vertical through the center of gravity of triangle ABB'. Where the polygon of the resultant pressure meets the line AX draw the perpendicular CD, the figure CDAB will be the required section of the wall.

39. Example 3. Retaining Wall with Inclined Front and Vertical Back. — In Fig. 52, AB represents the back of the wall and CD the given inclination of the front. Draw the usual horizontal lines, and from B draw B1 parallel

to CD. Along the upper line mark off the points F, 2, etc., and from these draw lines parallel to CD, the intervals will represent so many prismoids of masonry. Then draw the force polygon, and along the line of weights lay off the first segment, O1, to represent the weight of the triangular prism AB1,

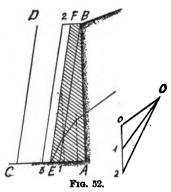


and then in succession the weights of the prismoidal strips lying to the left of B1. Find the center of gravity of the various prisms of masonry and draw the resultants in the usual manner, continuing them in each case to intersect the verticals through the centers of gravity. At the point E, where the polygon of resultants strikes

the base line, draw the line EF parallel to the given inclination CD. The figure ABEF will be the cross-section

of the required wall with the face parallel to the given inclination.


40. EXAMPLE 4. Retaining Wall with Faces inclined in Opposite Directions. — The line AB (Fig. 53) represents the back of the wall. From B draw a perpendicular and treat the first triangle as in Example 2. Then deal with

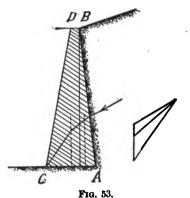


the rest of the wall, up to the front face CD, according to the method followed in Example 3. The resulting profile ABCD is the cross-section of the wall.

41. EXAMPLE 5. Retaining Wall with Parallel Inclined Faces. — The construction (Fig. 54) is perfectly similar to

that of Example 1, being careful to use as vertical center lines the verticals through the centers of gravity of the several sections of the wall. When both faces are inclined in the same direction but are not parallel, the general method of Example 4 is to be used.



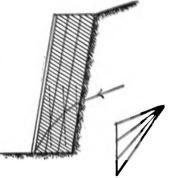


Fra. 54,

be solved in another way, employing the principle that the required section of the wall, which is in equilibrium with the pressure (1.5, 2, or 3 times the actual pressure, according to the factor of safety), is included between two cross-sections of which one has excessive stability and the other deficient stability. In other words, we first determine a section of wall in which the resultant between the pressure and weight falls outside the base of the section; it is evident that such a wall will not be strong enough to resist the assumed pressure. Then we determine a section of wall in which the resultant falls within the base; such a wall will be too strong. The required cross-section will be between these two.

In Fig. 55, ABCD and ABEF are the two cross-sections thus determined, and R and R_1 their respective resultants. From C drop a perpendicular and lay off a downward segment Cm = RC. At E erect a perpendicular and lay off upward a segment En = ER'. Connect n with m; at the point of intersection with the ground line draw a line paral-

lel to CD. The figure ABGH will be the required section of the wall. In this construction it is assumed that as the line representing the front of the wall moves from CD to

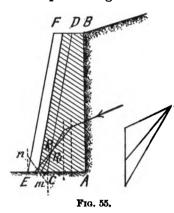

EF, the curves traced by points located in the manner m and n were located in a straight line. Really it is a curve of small curvature, but the error in assuming it to be straight is so small as to be negligible in practical work.

It may be required that the resultant of the actual earth pressure (not multiplied by a factor of safety) and the height

of the wall should fall within the middle third of the base. In this case proceed in the following manner: after

the thickness of the wall has been determined by any of the methods already explained, in the force polygon (Fig. 56), draw OS equal to the actual earth pressure and weight of the wall. On the back of the wall AB produce the line of pressure to intersect at Q the vertical dropped from the center of gravity of the figure ABGH. From Q draw a line

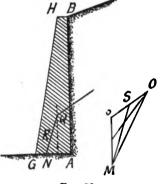


Fig. 56.


parallel to the resultant SM, intersecting the base AG at N. Now if this resultant falls either within or just at the extreme end of the middle third of the base, the wall

satisfies the given condition. But if it falls outside the middle third, the thickness of the wall must be increased until the new resultant does fall inside the middle third.

43. Example 6. Retaining Walls with Counterforts.—
The graphical determination of retaining walls with counterforts and buttresses becomes very simple when such walls are considered as composed of two parts having different specific weights. The stability of the wall will then be determined per unit of length just as in the cases already reviewed. For the sake of simplicity in the graphical construction it is assumed that both counterforts and buttresses are located 12 ft. apart, center to center, and that they are 3 ft. wide.

Under retaining walls with counterforts, two cases may be considered: (1) the thickness of the wall being given, it is required to determine the thickness of the counterfort; or (2), the thickness of the counterforts being given, the thickness of the wall is to be determined. We will begin with the first case, and we will consider the condition when both wall and counterforts are vertical.

Referring to Fig. 57, AB is the given thickness of the wall. It is required to determine the thickness AE of the counterfort. This is done by successive trials, adding small slices of wall, just as in the examples already discussed. The pressure P divides in the proportion of \(\frac{3}{4} \) on the wall and \(\frac{1}{4} \) on the

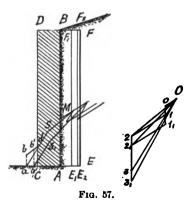

counterfort. Draw the force polygon in the usual manner. The pressure on the counterfort will be represented by oO; the weights of the various slices of the counterfort should be taken at 1 the weight of equal sections of Suppose AE is the first size of counterfort we Its weight will be represented by o1 in the force trv. polygon; draw the line 1.2 parallel to the pressure and equal to $\frac{3}{4}P$ (or $\frac{3}{4}2P$ in case 2 is used as factor of safety). Draw a perpendicular and lay off a segment 2.3 equal to the weight of the given wall; the line 3.0 will be the resultant. In the figure draw the line of pressure at $\frac{1}{2}E_1F_1$, produce it to meet the vertical from the center of gravity of the prism of masonry ABE_1F_1 , and from this point draw a line parallel to the resultant O3, until meeting at M the line of pressure which strikes the back of the wall AB at $\frac{1}{2}$ the height from A. Draw from M a parallel to the direction of pressure O2 of the force polygon, meeting at S the vertical dropped from the center of gravity of the wall ABCD, and from S draw a parallel to the resultant O3, meeting the ground line at the point a_1 . Take a second segment $E_1F_1E_2F_2$, add its weight 1.1, in the force polygon and proceed as above; we then find that the last resultant drawn from S_1 meets the ground line at the point a_2 . At a_1 and a_2 erect vertical lines and lay off segments a_1b_1 and a_2b_2 equal to AE_1 and AE_2 , respectively; connect b_1 and b_2 and produce this line until it intersects the line of the front of the wall at d. length of the line Cd represents the required thickness of the counterfort.

The prism of masonry of the counterfort ABEF displaces a similar prism of earth which was previously calculated as exerting thrust against the wall. The actual

pressure against the counterforted wall will therefore be a little smaller than the value used.

(b) When the thickness of the counterfort ABCD is given and it is required to determine the thickness of

the wall, the problem is easily solved. Draw the force polygon in Fig. 58 by laying off in the direction of the pressure a segment mo equal to $\frac{1}{4}P$ (or $\frac{1}{4}2P$ in case a factor of safety 2 is used); then draw a vertical line and lay off a segment mn equal to $\frac{1}{4}$ the weight of the counterfort, and from n in the direction of the pressure draw nr


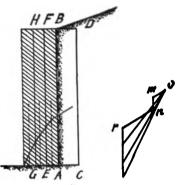


Fig. 58.

equal $\frac{3}{4}P$ (or $\frac{3}{4}2P$). From the point r draw a vertical line and lay off segments equal to the weights of the various slices of masonry ABEF, EFGH, etc., and pro-

ceed as in Example 1.

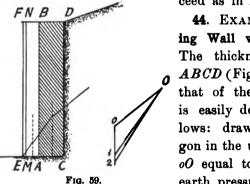


44. EXAMPLE 7. Retaining Wall with Buttresses.—
The thickness of the wall ABCD (Fig. 59) being given, that of the buttress ABEF is easily determined as follows: draw the force polygon in the usual way, making oO equal to twice the actual earth pressure; then lay off

vertically a segment o1 equal to the weight of the wall ABCD. Try a buttress of thickness AM and lay off in the

force polygon a segment 1-2 equal to one fourth the weight of the prism AMNB; draw the resultant 2.0. In the figure draw the pressure polygon and if the resultant strikes outside the base, try a new thickness of buttress. When the final resultant meets the ground line at the edge of or just within the base of the buttress the required thickness AE of the buttress ABEF will have been found.

45. EXAMPLE 8. Retaining Wall with Inclined Buttresses. — In case of inclined buttresses, the necessary thickness at the base is determined by trial. When the wall

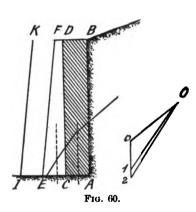

ABCD (Fig. 60) is given, the force polygon ool can be easily drawn; the center of pressure or resultant will certainly fall outside the base of the wall, otherwise there is no need of buttresses. Assume, then, any thickness EC for the buttresses and draw from E a line parallel to the given inclination IK; lay off in the force polygon a seg-

ment 1, 2 equal to one fourth the weight of the prism CDEF. From the point where the resultant emerging from the wall meets a vertical dropped from the center of gravity of CDEF, draw a line parallel to o2 of the force polygon. This will fall either within or without the wall; in the former case there is an excess of stability, and the thickness of the buttresses can be taken as EC or reduced by a new trial, while in the latter case it will be necessary to increase the thickness of the base, using the methods already indicated for walls.

46. Example 9. Retaining Walls with Relieving Arches between Counterforts.—In this case there will be back of the wall, besides the counterforts, the masonry arches and the earth packed between the arches. In order to determine the thickness of the counterforts and arches, it is necessary to determine the average specific weight of the structures and materials back of the wall.

Let A = the area included between the center lines of two consecutive counterforts,

 A_1 = the area occupied by the earth between the arches,

 A_1 = the weight of the earth per cubic foot,

 A_2 = the area occupied by masonry arches and counterforts, and

 A_2 = the weight of the masonry per cubic foot. The average specific weight back of the wall will be

$$W = \frac{A_1w_1 + A_2w_3}{A}.$$

After the unit of weight has been determined, the thickness either of the counterforts when the wall is given, or of the wall when the counterforts are given, is obtained as in the case of simple counterforts indicated above.


In the case of a retaining wall with relieving arches between the buttresses, the solution is similar to that indicated in Example 7 for determining the thickness of a buttress. In that example the buttresses taken as weighing only one fourth of the weight of the masonry of the wall, because they were only 1 yard wide and 4 yards apart. In the present case, however, the average specific weight of the buttresses and arches is to be calculated as

$$W = \frac{A_2 w_2}{A}$$
.

When this value has been determined the process is quite the same as already explained, and the required thickness of buttress is found directly.

DETERMINATION OF WIDTH OF BASE BY ANALYTICAL METHOD

- 47. Suppose ABCD (Fig. 61) to represent the cross-section of a retaining wall having inclined front and vertical back. The forces acting on the wall are:
 - (a) The outward pressure of the earth backing, P.
 - (b) The weight of the wall, W.
- (c) The reaction of the foundation upward against the base AC of the wall, which is equal and opposite to the resultant R of the two forces, P and W. This reaction will be denoted by R'.

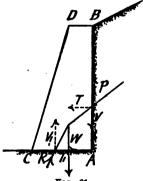

F1G. 01

Resolve the forces P and R' into their horizontal and vertical components; call T and V the horizontal and vertical components of the pressure P, and T' and V' the horizontal and vertical components of the reaction R'.

When the wall is in equilibrium, the algebraic sum of the forces as well as the algebraic sum of their

moments must be zero. Therefore

$$T-T'=0$$
,

$$W+V-V'=0,$$

and

$$Tt + Ww - V'v = 0,$$

t, w, and v being the lever arms of the forces T, W, and V',

or the distances of their points of application from A, the interior edge of the wall.

From the above equations we have:

$$T = T',$$

$$W + V = V',$$

$$Tt + Ww = V'v.$$

The last equation gives directly the value of v,

$$v = \frac{Tt + Ww}{V'}.$$

Substituting to V' its value W+V, we obtain

$$v = \frac{Tt + Ww}{W + V}. (1)$$

The pressure P makes an angle ϕ' with the normal to the back of the wall, and in the present case with the horizontal. Since T, the projection of P on the horizontal, we have

$$T = P \cos \phi',$$

$$V = P \sin \phi'.$$

Substituting these values in equation (1), there results

$$v = \frac{Pt\cos\phi' + Ww}{W + P\sin\phi'}.$$
 (2)

If from A we draw a line perpendicular to the direction of P, its angle with AB will be equal to ϕ' ; the length of this perpendicular will be $t\cos\phi'$, so that the latter term in equation (2) may be replaced by m. Then

$$v = \frac{Pm + Ww}{W + P\sin\phi'}.$$
 (3)

In order that the resultant R fall within the middle third of the base, v must lie between $\frac{1}{4}$ and $\frac{3}{4}$ the width of the

base. Calling the base t, it will have the smallest allowable value when

$$v=\tfrac{2}{8}\,t,$$

or

$$t = \frac{3}{2}v = \frac{3}{2}\left(\frac{Pm + Ww}{W + P\sin\phi'}\right),\tag{4}$$


which is the general formula.

Assume the thickness of the wall at the top to be 0.6 of the width of the base (in practice it would rarely be made smaller). Then the weight W of the trapezoidal section of the wall is expressed by the formula

$$W = \frac{t + 0.6 t}{2} h\gamma.$$

Substituting this value in equation (4) and solving for t, the thickness of the wall at the base is determined directly, without resort to trial calculation.

The case considered is only a special case, however, since we assumed that the back of the wall is vertical. The general case is that in which both back and front of the

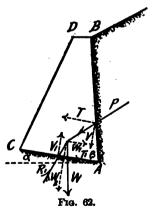

wall are inclined. Let us analyze this case, assuming further that to increase the safety against sliding, the base of the wall is inclined at an angle α to the horizontal. The angle between the base and the back of the wall will be called β (Fig. 62).

The external forces are the same as before; namely, P, W, and R'. Resolve each one into its components, normal and parallel to the base AC.

The forces being in equilibrium, we have

$$T - T_1 - W_1 = 0,$$

 $V + W_2 - V_1 = 0,$
 $Pm + Ww - V_1 v = 0,$

from which we deduce

$$T = T_1 + W_1,$$

 $V_1 = V + W_2,$
 $V_1 v = Pm + Ww.$

The last of these gives

$$v = \frac{Pm + Ww}{V_1}.$$

Substitute for V_1 its value $V + W_2$, we get

$$v = \frac{Pm + Ww}{V + W_2}.$$

Now the pressure P (Fig. 63) makes an angle ϕ' with the normal to the back of the wall, and consequently it makes an angle $(90 - \phi')$ with the surface AB. Then T makes


with P an angle $180 - \beta - (90^{\circ} - \phi') = 90^{\circ} - (\beta - \phi')$, so that the angle between P and its vertical component V is equal to $\beta - \phi'$. But $\beta = 90 - (\alpha + \delta)$; therefore

$$\beta - \phi' = 90 - (\alpha + \delta + \phi').$$

The vertical component V of the pressure P is therefore expressed by

$$V = P \cos (\beta - \phi)$$

$$= P \cos (90 - (\alpha + \delta + \phi')),$$
or
$$V = P \sin (\alpha + \delta + \phi').$$

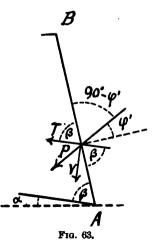

The angle between W_2 and W is equal to angle α , since the two angles have sides respectively perpendiculars; hence

$$W_2 = W \cos \alpha$$
.

On substituting these values of V and W_2 in equation 5, we find

$$v = \frac{Pm + Ww}{W\cos\alpha + P\sin(\alpha + \delta + \phi')}.$$

In order that the resultant shall pass through the outer edge of the middle third of the base, the base of the wall must be given a width of $t = \frac{9}{4}v$, or

$$t = \frac{3}{2} \frac{Pm + Ww}{W\cos\alpha + P\sin(\alpha + \delta + \phi')}.$$

On the other hand, if it is required that the wall shall be able to resist the pressure P with a factor of safety of n against overturning, we substitute Pn for P and make the base of the wall just wide enough so that the resultant strikes the outer edge of the wall; that is, we make t = v. In this case the formula becomes,

$$t = \frac{nPm + Ww}{W\cos\alpha + P\sin(\alpha + \delta + \phi')}.$$

CHAPTER V

DAMS

48. Kinds of Dams. — Walls intended to retain water instead of earth are called "dams." They can be considered as masonry structures erected for the purpose of raising the level of water.

Dams may be grouped in two classes: ordinary dams and submerged dams. Ordinary dams are those to retain or store water, forming a reservoir or lake. They are higher than the level of the water in the reservoir or lake. Submerged dams, on the other hand, have the object of raising the level of water in a river; since the water will continue to flow down the channel it rises sufficiently to overflow the structure, so that the dam will be entirely under water or submerged.

In regard to their manner of resisting the pressure of the water, dams may be classed as gravity dams and arched dams. Gravity dams are those which resist the pressure exclusively by their own weight. Arched dams, however, are those in which the pressure is transferred through the body of the masonry to the sides of the valley, against which the structure abuts. Arched dams are constructed in the shape of an arch having the two side hills for abutments, or skewback.

Another type of dam used in many instances is the reservoir embankment or earth embankment. These usually contain a masonry core wall, but as regards their static resistance against water pressure they are to be consid-

ered simple earth embankments, since the core wall is used only to prevent seepage of water through the embankment and to tie the mass of earth together, and not for the purpose of resisting the pressure of water. Earth embankments are not considered in this work.

Ordinary dams act exactly like retaining walls and by the use of the principles and methods already given it will be an easy matter to determine their proper proportions when we know the direction, magnitude, and point of application of the pressure which the structure is required to resist.

49. Direction of the Water Pressure. — The pressure of water is always perpendicular to the back of the dam. This fact was demonstrated by Pascal long ago. He performed an experiment in which he forced water into a hollow metal ball pierced with very small holes at various points. The water squirted out of all the holes with the same velocity, hence the same pressure. It was concluded that since the pressure in the water was equal in all directions, it must act in directions perpendicular to the surface inclosing it.


Referring to our discussion of earth pressure against retaining walls, it was shown that the direction of the pressure makes an angle ϕ' with the normal to the back of the wall, and we have always assumed that $\phi' = \phi$, the angle of natural slope of the material. When the material is water instead of earth, the angle of natural repose is equal to zero, so that ϕ' also will be equal to zero, and consequently the direction of the pressure will coincide with the normal to the back of the wall.

50. Amount of the Pressure. — In determining the pressure of earth against a retaining wall graphically it was found that the value of the pressure was given by the area

of a certain triangle multiplied by the unit of weight of the material. The triangle of pressure was shown to have one of its sides parallel to the directrix, a line drawn so as to make the angle $\phi + \phi'$ with the back of the wall, and another side lying in the surface of repose, these two sides being equal to each other. Since the construction used for this triangle of pressure is valid for all values of ϕ and ϕ' , independently of the nature of the material, it will apply also to water, a material in which the angle of natural repose is equal to zero.

Suppose the line AB (Fig. 64) represents the back of a dam and the line DC the surface of water in the reservoir

back of the dam. Since both ϕ and ϕ' are equal to zero, the surface of repose will coincide with the horizontal line AE, and the directrix coincides with the back of the dam AB. The triangle of pressure is then easily determined. The line AD will be the side of the isosceles triangle

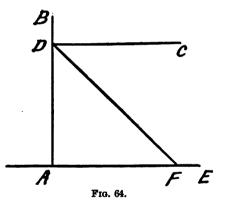

parallel to the directrix, and by measuring a length equal to AD on the horizontal line AE, the surface of repose, we determine the point F. Joining D with F, there results the triangle of pressure ADF, whose area multiplied by the specific weight of water will give the total pressure against the back of the dam. Thus,

$$P = \triangle ADF \cdot \gamma$$

which can be written also

$$P = \frac{1}{2} AD \times AF \times \gamma.$$

But AD = AF = h, the depth of water in the reservoir; substituting this value gives

$$P = \frac{1}{2}h \times h \times \gamma,$$


$$P = \frac{1}{2}h^2\gamma.$$

or

which is the well-known formula for determining the horizontal pressure of water against a dam.

51. Point of Application of the Pressure. — The point of application of the resultant pressure on the back of the dam is a distance above the base equal to one third the depth of water.

In Fig. 65, the triangle ABC represents the total pressure of the water when the depth of water is equal to AB. For

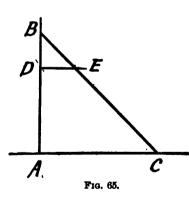

any other point, D, the total pressure on that part of the dam above the point will be given by the triangle BDE; calling $BD=h_1$, the total pressure represented by the triangle BDE is expressed by $P=\frac{1}{2}h_1^2\gamma$. Thus, in the case of water pressure as in the problem of earth pressure, the total pressure is

proportional to the square of the height of the wall. In the triangle ABC, the ordinates measured parallel to AC represent the intensities of pressure at the corresponding depths; thus the length of the line AC represents the intensity of pressure at the depth BA, while the length of the line DE represents the pressure per square foot at a depth BD. The total pressure on a small element of height near the

DAMS 109

point D is therefore measured by the area of the strip between the ordinates drawn at the upper and lower edges of the element, which is equal to the mean ordinate DE multiplied by the height of the element. The triangle ABC is the sum of all the pressure areas for all the successive elements of height composing the wall AB, or is equal to the total pressure. follows that the resultant pressure acts through the center of gravity of triangle ABC, which is located one third of AB above the base A. The location of this resultant is called the center of pressure.

The location of the center of pressure can also be determined analytically, as follows:

Represent any portion of the back of the dam by the area ABCD (Fig. 66). The coordinates of points of this area will be denoted by x and y, measured from O, in the water surface, y, representing the horizontal distance from the center line of the area, and x the depth from the water surface down to the point in question. Consider a narrow vertical strip of width The center of pressure of this strip is at a depth X below the surface, given by the following formula, for a total height of the strip equal

to h:

$$X = \frac{\int_0^h yx^2dx}{\int_0^h yxdx}.$$

Since y is constant, we may integrate for the rectangular area of the strip, thus,

$$\int_0^h x^2 dx = \left(\frac{x^8}{3}\right)_0^h = \frac{h^8}{3},$$

and

$$\int_0^h x dx = \left(\frac{x^2}{2}\right)_0^h = \frac{h^2}{2},$$

so that we have

$$X = \frac{y \int_0^h x^2 dx}{y \int_0^h x dx} = \frac{y \frac{h^3}{3}}{y \frac{h^3}{2}} = \frac{2 h^3}{2 h^2} = \frac{2}{3} h,$$

or the center of pressure is at $\frac{2}{3}$ the total height of the strip from the surface of water, or at $\frac{1}{3}$ the height from the base. The whole area ABCD is composed of a large number of such strips side by side, as the center of pressure for each is at the same height, the resultant center of pressure is also at $\frac{1}{3}$ h above the base.

Dams fail from precisely the same causes as retaining walls. Like a retaining wall, a dam may fail in any one of three different ways, viz., by rotation or overturning, by sliding, and by crushing. To insure the stability of a dam, three conditions must therefore be satisfied:

- 1. The resultant of water pressure and weight must fall within the middle third of the base. This will give a factor of safety of 2 against overturning, or rotation around the exterior point of the base.
- 2. The angle made by the resultant with the perpendicular to the base must be smaller than the angle of friction between the foundation and the dam. This condition will insure stability against sliding.
- 3. The maximum intensity of pressure at the base of the dam must be less than the crushing strength of the material. This condition will insure safety against crushing. A suitable factor of safety must be employed here.

The same conditions must be satisfied at every horizontal section of the dam, since each section BDE (Fig. 65) may be considered as an independent dam resting on the part ADEC as a foundation.

THEORETICAL PROFILE FOR DAMS

- 52. In studying dams we will always deal with a slice one foot in length. Then the area of the cross-section is numerically equal to the volume of the portion considered, and the area of the triangle of pressure multiplied by the weight of a cubic foot of water is equal to the total pressure.
- 53. Triangular Profile. The most economical profile for a dam, theoretically, is a triangular one, with downstream slope as given by the formula, demonstrated below,


$$\frac{t}{\hbar} = \sqrt{\frac{\gamma_a}{\gamma_m}},$$

where γ_a and γ_m represent the weights of the unit of volume of water and masonry respectively, t the thickness of the dam at the base and h the total height of the structure (Fig. 67).

The pressure P of water against the dam when the water surface is level with the crown is given by the formula,

$$P = \frac{1}{2} h^2 \gamma_a.$$

Hydraulics teaches that the pressure of water on a submerged surface of any shape whatever equals the area of the surface multiplied by the vertical distance from its center of gravity to the surface of the water, multiplied by the weight

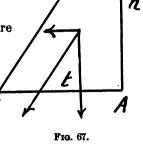

of a cubic foot of water. In the present case the water side of the dam being vertical, and the area of wetted surface being a rectangle whose width is one foot and whose height is equal to the depth of water, the center of gravity of the wetted area will be at the middle point of the height, or at $\frac{h}{2}$ below the water surface, while the area is $1 \times h = h$; the pressure P will be, therefore,

$$P = \frac{1}{2} h \times h \gamma_a = \frac{1}{2} h^2 \gamma_a$$

The weight of the dam (Fig. 67) will be,

$$W=\frac{1}{2}th\gamma_m$$
.

Dividing the pressure by the weight,

$$\frac{P}{W} = \frac{\frac{1}{2} h^2 \gamma_a}{\frac{1}{2} th \gamma} = \frac{\gamma_a h}{\gamma_m t}.$$

The outer edge of the middle third of the base will be at $\frac{1}{8}t$ from W, since the vertical line through the center of gravity of a right triangle will meet the base at $\frac{1}{8}$ the width from the right angle. Then taking moments about the outer edge of the middle third of the base, the resultant moment must be equal to zero if the resultant pressure passes through the edge of the middle third as is demanded by the condition of stability against overturning; that is,

$$P \times \frac{1}{2} h - W \times \frac{1}{2} t = 0,$$

or

$$P \times \frac{1}{3} h = W \times \frac{1}{3} t,$$

from which we find the relation necessary for stability to be,

$$\frac{P}{W} = \frac{\frac{1}{3}t}{\frac{1}{3}h} = \frac{t}{h}.$$

DAMS

But we found above that

$$\frac{P}{W} = \frac{\gamma_a h}{\gamma_m t}.$$

Equating the two expressions for $\frac{P}{W}$ gives

$$\frac{t}{\hbar} = \frac{\gamma_a h}{\gamma_m t},$$

or

$$\left(\frac{t}{\bar{h}}\right)^2 = \frac{\gamma_a}{\gamma_m},$$

and consequently

$$\frac{t}{h} = \sqrt{\frac{\gamma_a}{\gamma_m}}.$$

Therefore $\frac{t}{h}$, which is equal to the slope of the downstream face of the dam, must be made equal to the square root of the specific weights of water and masonry. Consequently the thickness t of the base of the triangular dam will be given by

$$t = \sqrt{\frac{\gamma_a}{\gamma_m}} h$$
.

54. Trapezoidal Profile. — In actual practice it is impossible to use the triangular dam profile, since it is necessary to give the dam a certain thickness at the top.

Therefore the simplest profile is the trapezoidal one, as exhibited by Fig. 68. Here $ABCD$ is the cross-section of the dam, t' being the thickness of the structure at the top.

Using the same notation as in the D
preceding case, the pressure of

Frg. 68.

the water is

$$P = \frac{1}{2} \gamma_a h^2,$$

and the weight of the dam is

$$Wm = \frac{1}{2} (t + t') h \gamma_m.$$

The weight W can be considered as the sum of the weights of the rectangular prism ABCE and the triangular prism DEC. Call the weights of these two prisms W_1 and W_2 . Then we will have

$$W = W_1 + W_2,$$

$$W_1 = \gamma_m t' h,$$

$$W_2 = \frac{1}{5} \gamma_m (t + t') h.$$

and

Let F be the outer edge of the middle third of the base AD. The distance of W_1 from F will be

$$w_1 = FW_1 = \frac{2}{3}t - \frac{1}{2}t' = \frac{4t - 3t'}{6},$$

while the distance of W_2 from F will be

$$\begin{split} w_2 &= FW_2 = \frac{2}{3}t - t' - \frac{t - t'}{3} = \frac{2t - 3t' - t + t'}{3}, \\ w_2 &= \frac{t - 2t'}{3}. \end{split}$$

For equilibrium about the point F we must have the algebraic sum of the moments equal to zero, or

$$P = \frac{1}{2}h - W_1w_1 - W_2w_2 = 0.$$

Substituting in this equation the various values found above, we obtain

$$\frac{1}{3} \times \frac{1}{2} \gamma_a h^2 \times h - \left(\gamma_m t' h \times \frac{4 t - 3 t'}{6} \right) - \left(\frac{1}{2} \gamma_m (t - t') h \times \frac{t - 2 t'}{3} \right) = 0.$$

Simplifying,

$$\frac{1}{8}\gamma_a h^8 - \frac{1}{8}\gamma_m t' h(4t - 3t') - \frac{1}{8}\gamma_m (t - t') h(t - 2t') = 0.$$

Now write αt in place of t', so as to represent t' in terms of t, α being a coefficient. Then

$$\frac{1}{6}\gamma_a h^3 - \frac{1}{6}\alpha t h(4t - 3\alpha t) - \frac{1}{6}\gamma_m(t - \alpha t)h(t - 2\alpha t) = 0.$$

This reduces as follows:

$$\begin{split} \gamma_a h^2 - \gamma_m \alpha t (4\ t - 3\ \alpha t) - \gamma_m (t - \alpha t) (t - 2\ \alpha t) &= 0, \\ \gamma_a h^2 - \gamma_m \alpha t^2 \, 4 + \gamma_m \alpha^2 t^2 \times 3 - \gamma_m (t^2 - \alpha t^2 - 2\ \alpha t^2 + 2\ \alpha^2 t^2) &= 0, \\ \gamma_a h^2 - \gamma_m t^2 (4\ \alpha - 3\ \alpha^2 + 1 - \alpha - 2\ \alpha + 2\ \alpha^2) &= 0, \\ \gamma_a h^2 - \gamma_m t^2 (\alpha + 1 - \alpha^2) &= 0, \end{split}$$


or

$$t = \frac{\sqrt{\frac{\gamma_a}{\gamma_m}}}{\sqrt{\alpha + 1 - \alpha^2}} h.$$

which is equal to the thickness of base required for a profile, as found above, divided by the quantity $\sqrt{1+\alpha-\alpha^2}$. For both the values $\alpha=0$ and $\alpha=1$ the quantity $\sqrt{1+\alpha-\alpha^2}$ is equal to 1. This means that a triangular and a rectangular profile require the same base width. In passing from the one to the other, the quantity referred to increases to a certain limit from which it decreases again. Its greatest value corresponds to $\alpha=0.5$. This means that the thickness t of the base of the dam decreases with increase of α from 0 to 0.5, while it increases when the value of α lies between 0.5 and 1. In other words, it will be most economical to give to the top of the dam a thickness less than half the width of the base; greater thickness of top produces a waste of masonry.

55. Pentagonal Profile. — In the trapezoidal profile there is an excess of stability at the section near the top of the dam, which means that a large quantity of masonry is used that might be saved by a better shape of cross-section.

Since the best theoretical profile is the triangular one, which is objectionable only because it gives zero thickness

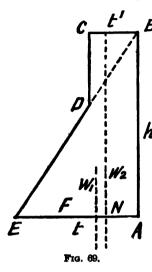

B mate theoretical perfection and yet correct this defect by using a cross-section whose lower part is similar to the corresponding part of the triangular section while the upper part is a wall of constant thickness. The result of this modification is the pentagonal profile, Fig. 69.

ABCDE, the profile of the dam, can be considered as composed of the triangle ABE of altitude h and base t, and the triangle BCD of altitude h' and base t'. The

pressure of water will be as before,

$$P = \frac{1}{2} \gamma_a h^2,$$

the weight of the dam will be equal to the weight of the two triangular prisms, $W = W_1 + W_2$;

since

$$W_1 = \frac{1}{2} \gamma_m t h,$$

and

$$W_2 = \frac{1}{2} \gamma_m t' h',$$

we will have

$$W = \frac{1}{2} \gamma_m t h + \frac{1}{2} \gamma_m t' h'.$$

The right triangles AEB and BCD are similar, having their angles equal and their sides parallel; consequently their sides will be proportional,

$$\frac{h}{h'}=\frac{t}{t'},$$

DAMS 117

or

$$h' = \frac{t'}{t}h$$
.

Expressing the dimensions of the upper section BCD in terms of the width of base by making $t' = \alpha t$, we obtain,

$$W = \frac{1}{2} \gamma_m t h + \frac{1}{2} \gamma_m \alpha t \times \frac{\alpha t}{t} h,$$

or

$$W = \frac{1}{2} \gamma_m th + \frac{1}{2} \gamma_m \alpha^2 th.$$

For stability against overturning it is necessary that the algebraic sum of the moments about the outer edge of the middle third of the base be zero. That is, using the distances w_1 and w_2 in the same sense as before,

$$P \times \frac{1}{3} h - W_1 w_1 - W_2 w_2 = 0.$$

Now

 $w_1 = \frac{1}{3}t$ and $w_2 = FA - NA = \frac{2}{3}t - \frac{2}{3}\alpha t = \frac{2}{3}t(1 - \alpha)$,

so that the equation of moments becomes,

$$\frac{1}{2} \gamma_a h^2 \times \frac{1}{8} h - \frac{1}{2} \gamma_m t h \times \frac{1}{8} t - \frac{1}{2} \gamma_m \alpha^2 t h \times \frac{1}{8} t (1 - \alpha) = 0,$$

or, reducing,

$$\label{eq:continuity} \tfrac{1}{6} \; \gamma_a h^3 - \tfrac{1}{6} \; \gamma_m t^2 h - \tfrac{2}{6} \; \gamma_m \alpha^2 (1-\alpha) t^2 h = 0,$$

or

$$\gamma_a h^2 - \gamma_m t^2 (1 + 2 \alpha^2 (1 - \alpha)) = 0,$$

from which

$$\ell^2 = \frac{\gamma_a h^2}{\gamma_m (1 + 2 \alpha^2 (1 - \alpha))},$$

or

$$t = \frac{\sqrt{\frac{\gamma_a}{\gamma_m}}}{\sqrt{1 + 2\alpha^2 - 2\alpha^3}} h,$$

which is the required thickness of base for the pentagonal profile.

Dividing both terms by h,

$$\frac{t}{h} = \frac{\sqrt{\frac{\gamma_a}{\gamma_m}}}{\sqrt{1 + 2\alpha^2 - 2\alpha^3}},$$

which is the slope EB. It is equal to the slope of the pure triangular profile, $\sqrt{\frac{\gamma_a}{\gamma_m}}$, divided by the quantity $\sqrt{1+2\alpha^2-2\alpha^8}$.

This quantity is equal to 1 when $\alpha = 0$ and when $\alpha = 1$, i.e. for the pure triangular and the pure rectangular profile. By differentiation, $\sqrt{1+2\alpha^2-2\alpha^3}$ with respect to α , we may find what value of α gives the greatest value to the denominator, and consequently the smallest width of base. It is found to be 0.666, that is, the smallest bottom width t is obtained when t', the top width, is made two thirds of the bottom width.

56. In the following tables the various dimensions and values for the minimum trapezoidal and pentagonal profiles are given in terms of the height. In working out these tables the ratio of upper base to lower base was taken at successive tenths from 0 to 1. The weights of the materials were assumed to be

water, $\gamma_a = 62.5$ lbs. per cubic foot. masonry, $\gamma_m = 150$ lbs. per cubic foot.

Benarks	Triangular profile	Trapezoidal profile	3	"	"	3	3	3	3	3	Rectangular profile
COEFFICIENT OF FEIGTION, P. W.	.645	.639	.634	.601	.586	.538	.496	.459	.423	.370	.322
$\frac{W}{8} = W$ $A_{mn} X \frac{1+3}{8} = W$	48.405 h²	48.84 h²	49.23 1/2	51.967 1/2	55.02 1/2	58.05 42	62.88 1/2	67.9575 h ³	73.845 h ³	84.36 1/2	96.81 1/2
Water Persoure, $V = \frac{1}{2} Y_o A^2$	31.25 A ²	31.25 14	31.25 12	31.25 1/2	31.25 1/2	31.25 h²	31.25 1/2	31.25 1/2	31.25 1/3	81.25 1/3	31.25 h ²
Volume, V	.3227 14	.3256 h ³	.3282 h²	.3464 h ³	.3668 1/2	.387 1/2	.4192 h²	.4530 h²	.4923 h ³	.5024 h ³	.8454 h²
Тиіскивы ог Тор, ґ	0.00 Å	0.0592 A	0.1094 А	0.1599 А	0.209в л	0.258 h	0.3144 й	0.3731 А	0.4376 А	0.5328 л	0.6454 л
Тигскижее от Влав, 4	0.6454 А	0.592 Л	0.547 А	0.533 л	0.524 л	0.516 л	0.524 A	0.533 A	0.547 А	0.592 h	0.6454 h
$RATIO, \frac{V}{\xi} = a$	0.00	0.1	0.3	0.3	0.4	0.5	9.0	0.7	8.0	6.0	1.00
Моивев	1	CI	တ	4	rc	9	2	œ	6	10	11

Rekabig	Triangular profile	Pentagonal profile	3	3	33	3	»·	3	3	"	25	Rectangular profile
Coefficient of	.645	.651	.641	.629	.619	.581	.543	.515	.502	.444	.385	.822
Wrieht, W-V·V	48.40 %	47.94 1/2	48.75 h²	49.62 h ³	50.46 h²	53.71 A ²	57.52 hz	80.68 1/2	62.16 h²	70.27 ha	81.03 1/2	96.81 1/4
$Y_{A} = \frac{1}{2} Y_{a} \lambda^{3}$ $Y_{A} = \frac{1}{2} Y_{a} \lambda^{3}$	31.25 №	81.25 1/2	31.25 1/2	81.25 14	31.25 h ^a	81.25 1/2	81.25 A ²	31.25 As	81.25 1/2	31.25 A ²	81.25 1/2	81.25 14
$L = \frac{3}{4}(1 + \alpha^2) th$ $Volume,$.3227 1/2	.3196 1/2	.3250 h ²	.3308 1/2	.3364 1/2	.3581 1/2	.3835 1/2	.4044 h²	.4144 h2	.4685 1/3	.5402 1/3	.6454 1/2
Тинскивее ов Тор, в	0.	.063 л	.124 Л	.180 Å	.232 h	.285 A	.336 Л	.369 Л	.392 А	4 924.	.531 й	.645 Л
тискижее ор	.0454 h	.633 А	.625 А	.607 А	.580 A	.573 А	.564 Л	.562 м	у 293.	.572 h	.597 А	.6454 h
RATIO, $\frac{t'}{t} = a$	0.0	0.1	0.5	0.3	0.4	0.5	9.0	99.0	0.7	8.0	6.0	1.0
Минек	-	61	က	4	2	9	2	œ	3	10	11	12

DAMS 121

PRACTICAL CROSS-SECTIONS

- 57. The theoretical dam profiles examined in the preceding chapter are very seldom used for practical purposes. But the trapezoidal and pentagonal profiles are valuable guides to the engineer in designing suitable cross-sections for dams. The trapezoidal profile approximates the preferred outline for submerged dams, while the pentagonal profile is the basal form of all the high dams erected in recent years.
- 58. Submerged dams. Ogee Profile. According to Professor Merriman, the pressure of water against a submerged dam is given by the formula

$$P=\frac{1}{2} h (h+d),$$

where d is the height of water above the dam. The point of application of the resultant pressure on the upstream side of the dam is at a height above the base given by the formula,


$$p = \frac{h+3d}{h+2d} \times \frac{1}{3} d.$$

The most suitable profile for a submerged dam is the one having an ogee curve on the downstream side which guides the water flowing over the crest. Such a profile is produced by changing the downstream face to the form of a reverse curve tangent to the face at mid-height, the upper curve giving a rounded top to the dam while the lower one turns forward horizontally downstream.

In designing a submerged dam where the depth of water over the crest will not be greater than 10 ft., the following practical rule may be used with advantage. It gives a profile in which the line of resistance is clearly shown in Fig. 71, and it is very close to the median line of the structure.

Determine, first, the thickness of base for a trapezoidal

profile according to the method given previously, taking as depth of water the height of dam plus the depth of water over the crest, or H = h + d, and making the top width 0.3 of the width of the base; in other words, making a = 0.3. The trapezoidal profile ABDC (Fig. 70) will thus be obtained.

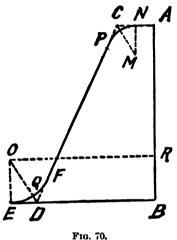

Bisect the angle ACD by the line CM. Then from the middle point of AC drop the vertical N meeting the bisector at M. With M as center and MN as radius describe the arc NP. Similarly bisect the angle EDF by the line DC. From a point R on the back of the dam, at a height equal to 4d above the base, draw a horizontal line RC meeting the bisector at C. With C as center and CE as radius describe the

arc EQF. The result is the profile ANPFQEB, which is a suitable cross-section for submerged dams when the height of water above the dam or d is not more than 10 ft.


The resistance of an ogee profile designed according to the preceding rule was determined graphically by Mr. William J. S. Deevy, and the result of his work is given in the following table, referring to Fig. 71. The data assumed were as follows:

h = height of dam = 80 ft.

d = depth of water over the crest = 5 ft.

 γ_a = weight of water per cubic foot = $62\frac{1}{2}$ lbs.

 γ_m = weight of masonry per cubic foot = 150 lbs.

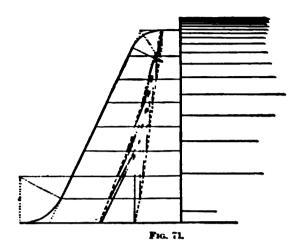


NUMBER OF BECTION FROM CREST	LERGTH OF JOINT	WATER PRESENTED ON PACE ABOVE PROTION, LHS.	AREA OF CROM-	WRIGHT OF DAM AROVE BESTION, I.R.	Няюнт ор ('им- тав ор Римесия, Эт.	DISTANCE OF CENTER LINE RITHER FACE	DISTANCE OF RE- BULTANT PROM DOWNSTREAM FACE	DISTANCE OF CENTER OF THE OF CENTER OF UPPTERMENT
1	21.5	6250	173.33	26000	4.16	10.5	11.5	9
2	26	18750	410.83	61625	11	13	13	10.5
3	31	37500	695.83	104375	11.25	15.5	15	12
4	36	62500	1030.83	154625	14.66	18	16.7	13.5
5	41	93750	1415.83	212375	18.05	20.5	17.5	14.5
6	46	131250	1850.83	277625	21.43	23	19.5	16
7	50.5	175000	2333.33	350000	24.8	25.75	20.5	17.5
8 base	67.5	224000	2923.33	438500	28.1	33.75	35.5	19.5

59. High Dams. — Many authors have suggested practical rules for the designing of high dams. All these profiles, however, closely resemble the pentagonal profile, with the difference that the length of the horizontal joints is increased either by giving a batter to the upstream side of the dam or by making the face curvilinear, while on the downstream

face the vertical and inclined portions are connected by a curve of small radius. In such profiles the line of resistance, both with full and with empty reservoir, falls within the middle third of the joint at all joints.

60. Crugnola's Section. — Mr. Giacomo Crugnola, in his work, "Sui muri di sostegno delle terre e sulle traverse dei

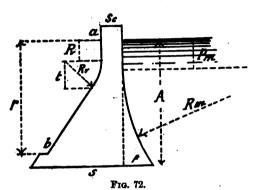


serbatoi d'acqua," gives the following data for designing masonry dams, resulting in the profile shown by Fig. 72. In this table the various dimensions by which the profile is determined are given in

meters, and the volumes of masonry are given in cubic meters.

			Urst	REAM	SIDE	D	owns:	tream Si				
A	a	Se	Pin	Rm	F	Po	Ro	t	•	•	i	Volume
 5	0.5	1.7	3.5	16	0.07	1.7	4	2.75	5	2.52		10.500
10	0.9	2	6.0	24	0.34	1.8	6	4.75	10	6.08		35.055
15	1.3	2.3	7.0	32	1.02	1.9	8	6.00	15	9.81		76.637
20	1.5	2.5	8.0	40	1.84	2.0	10	7.25	20	13.70		133.010
25	2	3.00	9.0	48	2.75	2.1	12	8.50	25	17.99		217.700
30	2.4	3.5	10.0	56	3.69	2.2	14	9.50	30	21.75		314.557
35	2.8	4.0	11.0	64	4.47	2.3	16	11.50	35	27.90		455.804
40	3.00	4.25	12.0	72	5.67	2.4	18	13.0	35	34.04	1	610.442
45	3.25	4.50	13.5	80	6.46	2.5	20	14.5	35	38.88	1	781.423
5 0	3.50	4.75	15.0	88	7.26	2.6	22	16.0	35	46.92	1	996.108

61. Krantz's Section. — The French engineer Krantz, in his book, "Étude sur les murs de réservoirs," has suggested another practical profile for designing dams of various heights. Krantz's profile is shown in Fig. 73. All the elements for designing the Krantz profile for any height

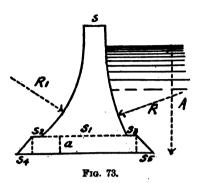

are given in the following table in meters:


A	u .	*	* 1	^3	83	84	85	R	R ₁	Volume
5		2.0	4					13	13	14.280
10		2.5	7				ł	26	21.85	42.190
15		3.0	10.5	ĺ				39	27.25	85.960
20		3.5	14.5	1		ĺ		52	32.07	147.660
25		4.0	19	ļ		ľ		65	36.25	229.120
30		4.5	24	ļ		1		78	40.08	331.890
35		5.0	29.5		ļ			91	43.75	457.290
40	5	5.0	29.5	1	1	5	3.33	91	43.75	635.620
45	10	5.0	29.5	1	1	10	6.67	91	43.75	855.640
50	15	5.0	29.5	1	1	15	10	91	43.75	1117.290
	L	<u>!</u>	L	<u> </u>		<u> </u>		L	L	L

Both Crugnola and Krantz determined their profiles by a long series of trials designed without the use of any formula or definite rule.

62. Author's Section. — A practical profile for a dam of any height may be easily obtained in the following manner, based upon the theoretical profile. The method can be applied to any case.

Calculate the thickness of base for a pentagonal profile (Fig. 69) by the methods previously given, assuming for α the value of 0.2, so that t' = 0.2 t. From the reëntrant angle

of the downstream face, where the vertical and inclined por-

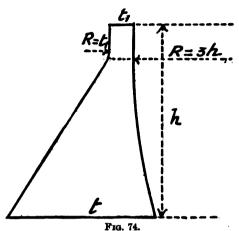

tions of the face meet, draw a horizontal line, and with center on this line, upstream from the dam, and a radius equal to three times the height of the dam, describe an area of circle tangent to the upstream face; this curve will form the back of the dam

in place of the vertical face of the theoretical profile. Then join the vertical and inclined portions of the down-

stream face by a curve of radius equal to the top width of the dam. There results a profile similar to the one shown in Fig. 74.

The lines of resistance of a dam 100 ft. high designed according to the method indicated above are given in Fig. 75, both for reservoir full and for reservoir empty. In the calculation of these lines, the weight of water was assumed to be 625 lbs., and the weight of masonry 150 lbs. per cubic foot. The dimensions and pressures for the various joints, as given in the following table, were cal-

culated by Mr. John M. Fitzgerald:

Fig. 75.

SECTION	Water Pressure, Les.	Weight of Dan above, Les.	Lкистн ог Јогит. Ft.	DISTANCE FROM FRONT FACE TO LINE OF RESULT- ANT PRESSURE, FT.	DISTANCE PROM RESULTANT TO CENTER OF GRAV- ITT, FT.	DISTANCE PROM CENTER OF GRAV- ITY TO UPSTREAM FAGE, FT.
1	3115	22500	13.5	6.0	0.5	7.0
2	12500	45250	16.5	7.0	2.5	7.5
3	28125	72500	19.5	7.0	4.5	8.0
4	50000	107500	27	11.5	6.0	9.5
5	78125	155000	34	14.5	7.5	12
6	112500	207.500	42	16.5	10.5	15.0
7	153125	280.000	49.5	19.0	12.5	18.0
8	200000	350000	56.5	21.0	15.5	20.0
9	253.125	420000	64.5	23.5	17.0	24.0
10	312.500	556250	73.5	25.5	18.0	34.0

Comparing the figures in the last three columns, it will be seen that the lines of resistance, both reservoir full and reservoir empty, falls well within the middle third of the corresponding joint.

In very high dams the value of α for this profile ($\alpha = t' + t$, or top width divided by width of base) may even be decreased to 0.15 or 0.1; if this is not done, the dam will be very thick at the top, with corresponding waste of masonry.

Dams built for reservoir purposes must be higher than the level of water in the pool formed by the dam. The portion of the structure which rises above the water is called the crest of the dam. It is noteworthy that both Krantz and Crugnola, as well as all others who have suggested dam profiles, have given various dimensions for the height of crest of dams of various heights. As a general rule, it is well to make the crest at least $\frac{1}{10}$ the total height of the dam. In the profile suggested by the author, the crest was not taken into account, but following the general

rule it would be very easy to add to the profile of Fig. 75 a prism of masonry 10 ft. high. Since no water pressure is added hereby, the added prism of masonry tends to increase the stability of the structure, since it increases the weight upstream of the center of gravity.

In regard to the manner of determining graphically the line of resistance in a dam of a given profile, the following method may be used: divide the profile into a number of sections by drawing horizontal lines 5 ft. or 10 ft. apart. These lines will divide the profile into so many dams with parallel bases, in each case considering the entire area above the horizontal line or joint in question. Find the center of gravity of each of these small dams and draw vertical lines through the various centers of gravity. Mark the point where each vertical cuts its corresponding base, and draw a continuous line through the points thus obtained. the line of resistance for empty reservoir, or when the dam has no pressure to resist. Next draw a force polygon, laying off vertically in succession the weight of the successive slices of the dam. From the upper end of the first-weight line in the force polygon draw a horizontal line and upon it lay off, to the same scale as used for the weights, the successive water pressures on the various slices. Connect the ends of the pressure and weight lines corresponding to each other. The connecting lines represent to scale the resultants of weight and pressure for the several sections of the dam, in each case the entire section above the joint considered. Then return to the profile, and at 1 of the height of each section or partial dam (point of application of the pressure) draw from the vertical which was dropped from the center of gravity a line parallel to the corresponding resultant. Mark the points where the various resultants intersect the

corresponding points, and connect these points by a continuous line. This is the line of resistance for full reservoir, i.e. when the dam is resisting the maximum water pressure. The dash-and-dot lines in Fig. 75 are the two lines of resistance, the right-hand one being for reservoir empty and the left-hand one for reservoir full. The gravity lines and the lines of resultant pressure for each dam of partial height are also shown in the figure, showing clearly how the lines of resistance are obtained.

STANDARD TEXT BOOKS

PUBLISHED BY

D. VAN NOSTRAND COMPANY,

NEW YORK.

ABBOTT, A. V. The Electrical Transmission of Energy. A Manual for the Design of Electrical Circuits. Fourth Edition, entirely rewritten and enlarged. Fully illustrated. 8vo, clothnet, \$5.00
ASHE, S. W., and KEILEY, J. D. Electric Railways, Theoretically and Practically Treated. Vol. I, Rolling Stock. 12mo, cloth. 290 pp., 172 illustrations
Electric Railways. Vol. II. The Sub-Station and the Distributing System. 12mo, cloth. Illustrated
ATKINSON, Prof. A. A. (Ohio University.) Electrical and Magnetic Calculations, for the use of Electrical Engineers and Artisans, Teachers, Students, and all others interested in the Theory and Application of Electricity and Magnetism. Second edition, revised. Svo, cloth. Illustratednet, \$1.50
ATKINSON, PHILIP. Electric Generation, edition. Illustrated. The Elements of Electric Lighting, including Measurement, Storage, and Distribution. Tenth 12mo, cloth
The Elements of Dynamic Electricity and Magnetism. Third edition. 120 illustrations. 12mo, cloth
Power Transmitted by Electricity, and its Application by the Electric Motor, including Electric Railway Construction. Third edition, fully revised, new matter added. Illustrated. 12mo, cloth\$2.00
AUCHINCLOSS, W. S. Link and Valve Motions Simplified. Illustrated with 29 wood-cuts, 20 lithographic plates, together with a Travel Scale, and numerous useful tables. Fourteenth edition, revised. 8vo, cloth
BEAUMONT, ROBERT. Color in Woven Design. With 32 colored plates and numerous original illustrations. Thick 12mo
BERNTHSEN, A. A Text-Book of Organic Chemistry. Translated by George McGowan, Ph.D. Fourth English edition. Revised and extended by the author and translator. Illustrated. 12mo, cloth\$2.50
BIGGS, C. H. W. First Principles of Electricity and Magnetism. A book for beginners in practical work, containing a good deal of useful information not usually to be found in similar books. With numerous tables and 343 diagrams and figures. 12mo, cloth, illustrated\$2.00

BOWIE, AUG. J., Jr., M.E. A Practical Treatise on Hydraulic Mining in California. With Descriptions of the Use and Construction of Ditches, Flumes, Wrought-iron Pipes and Dams; Flow of Water on Heavy Grades, and its Applicability, under High Pressure, to Mining. Ninth edition. Quarto, cloth. Illustrated
BOWSER, Prof. E. A. An Elementary Treatise on Analytic Geometry. Embracing Plane Geometry, and an Introduction to Geometry of Three Dimensions. 12mo, cloth. Twenty-first edition
An Elementary Treatise on Analytic Mechanics. With numerous examples. 12mo, cloth. Eighteenth edition\$3.00
CATHCART, Prof. WM. L. Machine Design. Part I. Fastenings. 8vo, cloth. Illustratednet, \$3.00
CHRISTIE, W. WALLACE. Chimney Design and Theory. A book for Engineers and Architects, with numerous half-tone illustrations and plates of famous chimneys. Second edition, revised. 8vo, cloth: \$3.00
CROCKER, F. B. Electric Lighting. A Practical Exposition of the Art, for Use of Engineers, Students, and others interested in the Installation or Operation of Electrical Plants. New edition, thoroughly revised and rewritten. Vol. I. The Generating Plant. 8vo, cloth. Illustrated
mos and Motors. New edition, thoroughly revised and rewritten, with a special chapter by H. A. Foster. 12mo, cloth. Illustrated. In press.
DORR, B. F. The Surveyor's Guide and Pocket Table-Book. Fifth edition. Thoroughly revised and greatly extended. With a second appendix up to date. 16mo, morocco, flaps
DRAPER, C. H. Heat, and the Principles of Thermo-Dynamics. With many illustrations and numerical examples. 12mo, cloth\$1.50
Proper Use. With an Introduction by E. W. Duckwall, M.S. 8vo, 202 pp., cloth

- FOSTER, H. A. Electrical Engineers' Pocket-Book. With the Collaboration of Eminent Specialists. A handbook of useful data for Electricians and Electrical Engineers. With innumerable tables, diagrams, and figures. Third edition, revised. Pocket size, full leather, 1000 pages.
- FOX, WM., and THOMAS, C. W., M.E. A Practical Course in Mechanical Drawing. With plates. Second edition, revised. 12mo, cloth. \$1.25

- HALL, WM. S., Prof. Elements of the Differential and Integral Calculus. Sixth edition, revised. 8vo, cloth. Illustrated. net, \$2.25
- Applications. Comprising an 8vo volume of text and a 4to Atlas of illustrated problems. Two vols, cloth......net, \$3.50

- HECK, Prof. R. C. H. The Steam-Engine. Vol. I. The Thermodynamics and the Mechanics of the Engine. 8vo, cloth, 391 pp. Illustrated. net. \$3,50
- HERRMANN, GUSTAV. The Graphical Statics of Mechanism. A Guide for the Use of Machinists, Architects, and Engineers; and also a Text-Book for Technical Schools. Translated and annotated by A. P. Smith, M.E. 7 folding plates. Fourth edition. 12mo, cloth.\$2.00
- HOPKINS, Prof. N. MONROE. Experimental Electrochemistry. Theoretically and Experimentally Treated. 300 pp., 8vo. Illustrated. net, \$3.00

- Elementary Manual on Steam, and the Steam-Engine. Specially arranged for the Use of First-Year Science and Art, City and Guilds of London Institute, and other Elementary Engineering Students. Third edition. 12mo, cloth. \$1.50

- LUQUER, LEA McILVAINE, Ph.D. Minerals in Rock Sections. The Practical Method of Identifying Minerals in Rock Sections with the Microscope. Especially arranged for Students in Technical and Scientific Schools. New edition, revised. 8vo, cloth. Illustrated.....net, \$1.50

- MOSES, ALFRED J., and PARSONS, C. L. Elements of Mineralogy, Crystallography, and Blow-Pipe Analysis, from a Practical Standpoint. 336 illustrations. New and enlarged edition. 8vo, cloth......\$2.50

- OLSEN, Prof. J. C. Text-Book of Quantitative Chemical Analysis by Gravimetric, Electrolytic, Volumetric, and Gasometric Methods. With seventy-two Laboratory Exercises giving the analysis of Pure Salts, Alloys, Minerals, and Technical Products. 8vo, cloth. Illustrated. 513 pages. net. \$4.00
- PALAZ, A., Sc.D. A Treatise on Industrial Photometry, with special application to Electric Lighting. Authorized translation from the French by George W. Patterson, Jr. 8vo, cloth. Illustrated.......\$4.00

- PAULDING, CHAS. P. Practical Laws and Data on Condensation of Steam in Covered and Bare Pipes. 8vo, cloth. Illustrated. 102 pages. net, \$2.00
- The Transmission of Heat through Cold-Storage Insulation.
 Formulas, Principles, and Data relating to Insulation of every kind. A
 Manual for Refrigerating Engineers. 12mo, cloth. 41 pages. Illustrated.
- PERRINE, F. A. C., A.M., D.Sc. Conductors for Electrical Distribution; Their Manufacture and Materials, the Calculation of the Circuits, Pole Line Construction, Underground Working and other Uses. With diagrams and engravings. 8vo, cloth.....net, \$3.50
- PERRY, JOHN. Applied Mechanics. A Treatise for the Use of Students who have time to work experimental, numerical, and graphical exercises illustrating the subject. 650 pages. 8vo, cloth.....net, \$2.50
- PLATTNER. Manual of Qualitative and Quantitative Analysis with the Blow-Pipe. From the last German edition, revised and enlarged, by Prof. Th. Richter, of the Royal Saxon Mining Academy. Translated by Prof. H. B. Cornwall, assisted by John H. Caswell. Illustrated with 78 woodcuts. Eighth edition, revised. 463 pages. 8vo, cloth.net, \$4.00

- POPE, F. L. Modern Practice of the Electric Telegraph. A Technical Handbook for Electricians, Managers, and Operators. Seventeenth edition, rewritten and enlarged, and fully illustrated. 8vo, cloth.\$1.50
- --- Earth and Rock Excavation. A Manual for Engineers, Contractors, and Engineering Students. 8vo, cloth. Illustrated. 350 pp...net, \$3.00
- Outlines of Proximate Organic Analysis, for the Identification,
 Separation, and Quantitative Determination of the more commonly occurring Organic Compounds. Fourth edition. 12mo, cloth..........\$1.75
- ----- First Book in Qualitative Chemistry. Twelfth edition. 12mo, cloth......net, \$1.50
- and OTIS COE JOHNSON. Qualitative Chemical Analysis. A
 Guide in the Practical Study of Chemistry and in the Work of Analysis.
 Fifth fully revised edition, entirely rewritten. With Descriptive Chemistry extended throughout. 8vo, cloth......net, \$3.50

- RAYMOND, E. B. Alternating Current Engineering Practically Treated. 8vo, cloth. Illustrated. 232 pages. Second edition, revised. net, \$2.50
- REINHARDT, CHAS. W. Lettering for Draughtsmen, Engineers and Students. A Practical System of Free-hand Lettering for Working Drawings. New and revised edition. Eighteenth thousand. Oblong boards. \$1.00
- RICE, Prof. J. M., and JOHNSON, Prof. W. W. On a New Method of Obtaining the Differential of Functions, with especial reference to the Newtonian Conception of Rates of Velocities. 12mo, paper.........\$0.50
- SEVER, Prof. G. F. Electrical Engineering Experiments and Tests on Direct-Current Machinery. With diagrams and figures. 8vo, pamphlet. Illustrated......net, \$1.00
- and TOWNSEND, F. Laboratory and Factory Tests in Electrical Engineering. 8vo, cloth. Illustrated. 236 pages.....net, \$2.50
- SHELDON, Prof. S., Ph.D., and HOBART, MASON, B.S. Dynamo Electric Machinery; its Construction, Design, and Operation. Direct-Current Machines. Fifth edition, revised. 8vo, cloth. Illustrated. net, \$2.50
- Alternating Current Machines. Being the second volume of the authors' "Dynamo Electric Machinery; its Construction, Design, and Operation." With many diagrams and figures. (Binding uniform with volume I.) Fourth edition. 8vo, cloth. Illustrated.....net, \$2.50

- STALEY, CADY, and PIERSON, GEO. S. The Separate System of Sewerage; its Theory and Construction. With maps, plates, and illustrations. Third edition, revised and enlarged. 8vo, cloth \$3.00

- THURSO, JOHN W. Modern Turbine Practice and Water-Power Plants. 8vo, 244 pages. Illustrated.....net, \$4.00

- WALLING, B. T. Lieut.-Com., U.S.N., and MARTIN, JULIUS. Electrical Installations of the United States Navy. 8vo, cloth. In press.
- and HERRMANN, G. Mechanics of Air Machinery. Authorized translation with an appendix on American practice by Prof. A. Trowbridge. 8vo, cloth 206 pages. Illustrated......net, \$3.75
- WESTON, EDMUND B. Tables Showing Loss of Head Due to Friction of Water in Pipes. Second edition. 12mo, cloth........\$1.50
- WILSON, GEO. Inorganic Chemistry, with New Notation. Revised and enlarged by H. G. Madan. New edition. 12mo, cloth.....\$2,00
- WRIGHT, Prof. T. W. Kinetics, and Statics. Cloth. ... Elements of Mechanics, including Kinematics, 8vo, cloth. ... \$2.50





Graphical determination of earth sl 006368361